


ViewPoint 2D+ FIDS & Signage

Advanced Information Display

Software user manual

Midas
ViewPoint™ data processing & display control
Advanced Information Display Systems

PC and Internet Remote Control

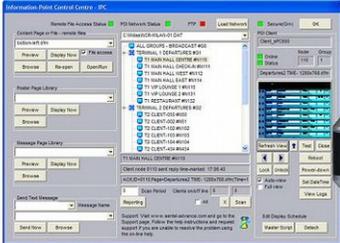

Secure network with data encryption



mixed content & 3D effects



advanced tables

Departures	17:00
6-6 14000 JAGHORA	15:55 17:15 12 1 21
6-6 16113 BOSTON	15:55 14:50 8 1 82
6-6 16222 BOMBAY	15:55 17:40 7 1 83
6-6 16458 BANGALORE	15:55 18:00 14 1 54
6-6 16213 LASERDAR	15:55 16:00 8 1 57
6-6 16450 JAGHORA	15:55 20:00 2 1 51
6-6 16405 TURAN	15:55 21:30 6 1 48
6-6 16216 ZANDRAN	15:55 23:40 13 1 42

data-driven graphics



private television



ePC® designed for mission-critical Applications

Released: 11/2016

Software Version 3.8XX



PRELIMINARY

Legal Notice

This publication is copyright and all rights reserved worldwide by Sentel Advance, Viva3D Group. No part of this document may be reproduced or copied using any means including electronic without the written permission of Sentel. The information contained in this document is believed to be accurate, however, Sentel accepts no responsibility for any errors or omissions or any related damages arising from such.

Trademarks

ePC, “ePC – the embedded PC”, “plug and play display”, Midas, ViewPoint, Viva3D, Maxum, Maximedia, AVC, AutoPA, DirectPA, *freeform*, and Maximedia, POI, PIMS are trademarks of Sentel. All other trademarks acknowledged.



**Windows
XP - 10**

MIDAS VIEWPOINT..... 1

ADVANCED INFORMATION AND & TV SYSTEMS..... 1

SOFTWARE MANUAL – FOR DEVELOPERS..... 1

FOREWORD..... 5

OVERVIEW..... 7

USING MIDAS VIEWPOINT..... 9

INTRODUCTION..... 10

MAKING THE MOST OF THE EPC AND VIEWPOINT..... 10

WHY WAS THE EPC AND MIDAS VIEWPOINT DEVELOPED?..... 10

DEMONSTRATION DOWNLOAD..... 11

STARTING UP – INTRODUCING VIEWPOINT’S INTERFACE AND BASIC FEATURES..... 11

ON-SCREEN EDITING..... 18

BASIC DISPLAY FORM DESIGN..... 19

FINDING AND ACCESSING OBJECTS..... 22

ADVANCED OBJECT PROPERTIES..... 23

INTERACTIVE DISPLAYS..... 24

BUTTON COMMAND LIST..... 27

BUILT-IN ANIMATION TECHNIQUES 28

VIDEO OVERLAY OVERVIEW – REAL-TIME VIDEO MIXING..... 32

FINISHING DISPLAY FORMS..... 35

DIALOG INTERFACES..... 38

FIGURE 6 – DISPLAY OBJECT EDITOR	39
FIGURE 9 – DISPLAY OBJECT ADVANCED SETTINGS.....	43
FIGURE 10 – SYSTEM CONTROL CENTRE	45
FIGURE 11 - MASTER SCRIPT DIALOG	47
FIGURE 12 – OPERATIONAL PROPERTIES DIALOG	50
FIGURE 13 & 14– DATABASE PROPERTIES	52
FIGURE 16 & 17 – DATABASE RECORD EDITOR	56
FIGURE 18 – TRANSLATION PROPERTIES	58
FIGURE 19 – GLOBAL DISPLAY SETTINGS	60
FIGURE 20 – DISPLAY DEVICE SETTINGS	62
FIGURE 21 – CONFIGURATION DIALOG	64
FIGURE 22 – PRESENTATION PROPERTIES DIALOG.....	65
FIGURE 23 – SOUND SYSTEM PROPERTIES DIALOG.....	66
TUTORIAL SECTION.....	67
INTRODUCTION.....	68
TUTORIAL 1: CREATING A BASIC DISPLAY FORM.....	69
TUTORIAL 2: CREATING A DATABASE DISPLAY.....	72
TUTORIAL 3: CREATING A MULTIPLE FUNCTION DISPLAY.....	80
TUTORIAL 4: THE ANCONA DISPLAY.....	84
TUTORIAL 5: PRESENTATION PLAYBACK OVERVIEW.....	86
TUTORIAL 6: REMOTE CONTROL OVERVIEW.....	86
PRIVATE PACKET PROTOCOL.....	89
DATA PACKETS.....	91
COMMAND PACKETS.....	92
CONNECTION PORTS.....	96
SENTEL TECHNICAL SUPPORT.....	98
INDEX.....	98

Foreword

Midas ViewPoint™ FIDS & General Digital Signage has been designed especially to operate in mission-critical information display and digital signage applications where presentation quality and long-term reliability are paramount.

From simple scheduled video playback at public information points, to the most complex data-linked information displays at airports and factories, the Midas ViewPoint system provides the most reliable and easy to use solution.

The system can control almost any type of display device, from LEDs to HDTV displays, Projectors and Plasma screens. In addition, it is compatible with a wide variety of input devices, from touch-screens to infrared sensors. The system can deliver broadcast quality video and audio in real-time using enhanced mpeg decoding and TV-studio NTSC, PAL and SECAM output. The media subsystem is employed by the integrated Scripted Playback and Public Address facility to delivery high quality speech, music and video.

Specialised information display and media delivery applications are well supported by Midas ViewPoint, with its object-oriented information display and media delivery features designed for high-reliability and performance. Midas ViewPoint™ is also available as a Windows® application offering a robust and effective alternative to packages such as PowerPoint™, and is able to control and display PowerPoint presentations securely.

Midas ViewPoint – information display and TV systems: Our aim is to make this product meet your precise needs; if you need a new feature or a complete solution, we can help, just email info@sentel-advance.com for more information. Our design team will continue to improve this system, and we hope that you will help us through your own experiences and feedback. Please let us know if your application would benefit from any new features or if you need any advice or assistance.



The ePC is certified compliant with EU EMC and the Low Voltage Directives.

Guarantee

The ePC hardware and Midas ViewPoint software are supplied with a ten year operational support guarantee. The ePC's operating system is compliant as certified by the manufacturer, Microsoft Corp, Corel, Red Hat or other OS provider.

The **ePC** operates in desktop and embedded modes. 19" rack-mounting kit is available. The ePC is also available with integral CD or DVD-ROM, and other options.

This document provides technical information covering both hardware and software.

Related documents:

1. Midas ViewPoint™ for Linux, Windows XP - 10 and CE
Information Display System Technical Overview
Document DM-10-018-08A

ePC – the embedded PC™

Overview

The ePC™ has been designed to operate in desktop or stand-alone (embedded – without keyboard or mouse) modes. The ePC operates with or without a keyboard and mouse, automatically checks the local storage during boot-up, fixing any soft errors in the process, boots the OS from the hard disk or the network Server, and proceeds to set-up its display and await commands from the user, automated script or from the network or communications interface.

The ePC is fitted with USB connectors to replace the traditional floppy drive, supporting booting to MSDOS, Linux or Windows, and file transfer. The ePC may also be supplied with a DVD or CD-ROM drive. This provides several effective means for importing large files to the ePC's local hard drive.

To enhance reliability, the ePC is manufactured using the highest quality components commercially available. The operating system has been specially configured for automated operation and enhanced with software error correction. All components and device drivers have been extensively tested for compatibility and reliability, and have been modified to improve performance and reliability. As such, it is strongly recommended that users avoid making alterations to the system's configuration without reference to Sentel technical support.

Midas ViewPoint™ Software for Windows XP – 10, Server 2008+

ViewPoint is a 32-bit multi-threaded Windows application developed in the UK using C++ for Windows XP and up. With ViewPoint installed on ePC's and Workstations, a sophisticated information and eMedia system can easily be designed, managed and can be applied to a wide variety of tasks, from industrial process control and monitoring, to information displays, media delivery and even a Sign Language Translator user-interface. ViewPoint is the "plug and play information display™" system in every sense. ViewPoint controls each display and is also used to manage the display system using the ViewPoint Control Interface.

Information display layouts and scripts are created using a comprehensive toolkit with an intuitive icon-based user-interface. Displays are created using *freeform*™ Display Objects, providing an orthogonal and easily extended architecture.

In desktop mode, ViewPoint's graphical user-interface simplifies the design and management of high-reliability information display systems. ViewPoint is an object-oriented display control and user-interface application, which is highly customisable without the need for programming, easing development and increasing reliability. In embedded mode, ViewPoint manages the display of information processing commands received over the network or from the local script files. In the event of a power-failure, ViewPoint restarts at power-up after the embedded Windows operating system performs auto-reboot.

ViewPoint will continue to develop, with more operational features and an increasing library of display forms and images, all of which will be available to users. We plan to rationalise the user-interface periodically as new features are added. We will maintain backward compatibility with all earlier versions of software and support requests for application specific functions as far as possible.

Tablet compatibility

As of June 2016, ViewPoint is fully compatible with Windows Tablets.

Recommended System Requirements

PC2001 compliant PC or newer
AMD K6III 450, Celeron or Pentium III + grade 500 processor.
Windows/Linux: 2GB RAM.
256MB SVGA card supporting DirectX 9+, with 65K+ colors (16bpp).

Dependent on the requirement for content playback, i.e. dual-screen with mpeg2 or 3D page effects are required, the following minimum specification applies:

PC2002 compliant PC
AMD Athlon 1.4GHz, Celeron or Pentium IV 1.8GHz processor.
Intel D845 chipset or better.
Windows/Linux: 2GB RAM.
256MB SVGA card supporting DirectX 9+, with 65K+ colors (16bpp).

OS: Windows XP – 10/ Server, XP (or Linux – application dependent).

Environment

The ePC is designed to operate in an environment that should be dry, dust-free and ideally maintained at an average ambient temperature of between 5 and 38°C. The ePC will operate continuously at up to 45°C, although this will not prolong the life of the equipment.

The ePC should be inspected annually, and serviced at least every three years. If dust and debris accumulates on the circuit boards, careful cleaning with anti-static materials will be required. The onboard lithium battery has a shelf life of about ten years.

EMC

The ePC is tested for conformance to the EMC and Low-Voltage Directives. Note: To conform to legislation, when the equipment is connected to other devices within a larger system, EMC testing should be performed on the overall system.

Safety

Under no circumstances should an ePC's case be opened. High voltage circuits will be exposed. Opening the case voids the warranty, and may damage the equipment. Opening the case with the power disconnected may also expose live circuits, as electrolytic capacitors may hold charge for some time after power is disconnected.

Using Midas ViewPoint FIDS & Digital Signage

An explanation of the basic features of Midas ViewPoint and an introduction to creating display forms and presentations

Introduction

Anyone familiar with Windows will be able to use ViewPoint's basic features almost immediately to create scheduled presentations. The more complex features require an understanding of how ViewPoint works, and are intended to be used by developers.

ViewPoint is designed to produce professional presentations using rich graphics, video and audio. To achieve this on the PC architecture, careful attention to the design of the system hardware and software was required.

The most efficient coding and file formats have been employed to produce the smoothest control of the display. For example, only standard Windows bitmap files are recommended, as other more compressed formats, such as JPEG, can result in unwanted processing delays during image loading.

ViewPoint is an information presentation application, and not a drawing or photo editing application. Packages such as Corel or Adobe's PhotoShop are excellent products to design or edit both 2D and 3D images.

Using the most efficient standardised file formats accelerates run-time processing, improving display control, and increasing reliability. For live video display, avi or MPEG formats are fully supported, with mpeg 1 full-screen capability on the lowest specification ePC. MPEG 2 requires high-end hardware support and, as such, a higher-grade graphics adapter. The ePC is available with full MPEG 2 and DVD support options, supporting HDTV digital TV in full-screen. Live analogue video i/o is another option, and can be used to provide advanced CCTV and video overlay facilities.

Notes: Windows bitmaps (.bmp) should be rle (run length encoded) and in 16 or 24 bpp (bits per pixel) format. A 1024 by 768 65K colour image of an airline logo, unencoded, is typically 470 Kb. Encode this file using rle 4 and it reduces to just 27 Kb with absolutely no image degradation. Most good graphics programs will convert between common image formats and output bitmaps with rle encoding; an application named "Bitmap Converter" (rle.exe) is available for this purpose.

Making the most of the ePC and ViewPoint

Rich content media, animation and special effects can demand phenomenal computing power, especially for full-screen 3D effects, easily overloading even high-end multiprocessor Workstations. ViewPoint is not designed to restrict designers, and it will allow you to overload the system. The reason we allowed this was because PC technology is improving fast, and the restrictions of today will not apply tomorrow!

As PC technologies matures and stabilise, we refine and extend ViewPoint's capabilities – and we have many ideas about the features that you'll soon be able to employ. Today, we're experimenting with new technology that will allow us to deliver studio-quality animation effects and advanced real-time video processing. The PC will increasingly provide the performance needed to deliver stunning performance for a range of applications cost effectively.

Why was the ePC and Midas ViewPoint developed?

As an information technology company, we needed to be able to offer users cost-effective and flexible multimedia display and delivery systems based on standard PC technology that could be relied upon for continual operation in mission-critical applications. We looked at many excellent PC packages, but none had been originally designed to meet the needs of specialised commercial or industrial applications. With the ePC, you

have all the benefits of standard PC technology, but finely tuned for performance and reliability – and with the specialised features you need (if not, we can easily add them for you).

There are many new features available in the current release of the software, many of which may not have been fully documented at this point. The complexity of the display Object editor is a result of our efforts to make the system flexible enough for many applications. We will improve and rationalise the interface and supporting functions as development continues.

We plan to develop the ePC computer and ViewPoint to make it an ever more useful and flexible multimedia display, interface and media delivery system. The software and help support will change and grow over the next few years considerably. To help us improve the system to better meet your needs, all you need do is email us: ✉ info@sentel-advance.com

Capabilities

The ePC can generate all of the text and images that you may ever need to overlay onto video, even overlaying video with video. We are adding features almost continually for users that have specific needs. All of these new features will be made available in new software releases.

The ePC-ViewPoint system can be used to provide basic text overlay onto video, or used to create complex overlays using graphical controls, cross hairs and position indicators. Some of these objects, such as direction and horizon indicators, require specialized functions to control their settings. For example, one function we added as a specific feature was the control of a graphical compass. The compass was selected from one of several styles, and then positioned onscreen using the object editor. A private control sequence set the bearing and ViewPoint then set the compass pointer.

The documentation provided with the ePC will be extended to include new features and more help on using the range of facilities available. If you need assistance, please call us and we'll be pleased to help.

Demonstration Download

Example forms are provided on the ViewPoint Evaluation CD-ROM showing a wide range of features. Presentation start with the forms `avc-main.dfm` or `start.dfm`, and ideally requires high-performance video card to produce smooth animation effects using DirectX or OpenGL (Linux). The recommended specifications are detailed earlier in the manual. The ePC computer runs this demo with smooth effects and professional screen fading supported by an enhanced video card supporting hardware alpha-blending effects.

Note: The demo CD-ROM may contain copyright protected third-party materials that you must not use for any other purpose than evaluating the system. You must not copy or distribute any files from the CD-ROM without our written permission. If you do so, you may be liable for any infringement incurred. If you do not agree with this condition you should return the system or CD-ROM.

Starting up – Introducing Viewpoint's Interface and Basic Features

The diagram below illustrates the initial screen. The initial background shows the contents of object 0. The size of object 0 determines the size of the background (the display area). Several toolbars are available allowing quick and easy access to all of Viewpoint's features and operational dialog boxes. The toolbars may be repositioned by dragging. Dialog Boxes can also be dragged when they don't fit within the screen resolution by clicking on a non-active area.

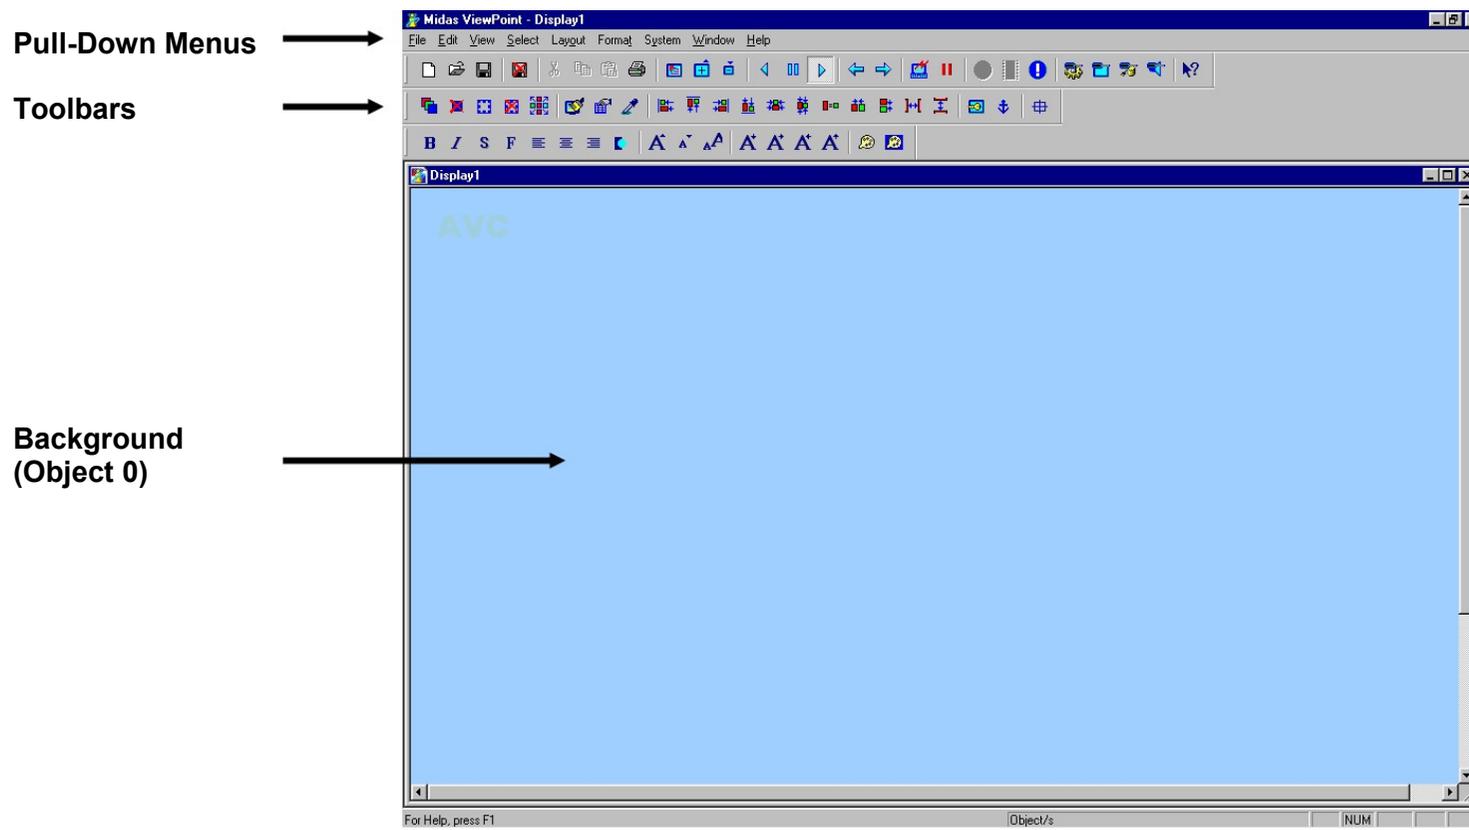


Figure 1 – Viewpoint User Interface

Text Toolbar



Pull-down Menu Location

Select Menu

Edit Menu

Layout Menu

Select Menu

N/A

N/A

N/A

Tool Properties

Creates new object (0, 0 position)

Deletes selected object

Selection enable for grouping, dragging and resizing

Deselect all objects

Replicate all selected objects, enters Replicator Dialog

Edit object properties

Edit advanced object properties

Sample Screen color into custom color entry #16

Align selected objects left

Align selected objects top

Align selected objects right

Align selected objects bottom

Align selected objects horizontally to centre

Align selected objects vertically to centre

Make selected objects same size (hold shift for custom size)

Abut (remove space) selected objects horizontally

Abut (remove space) selected objects vertically

Equally space selected objects between left and right objects

Equally space selected objects between top and bottom objects

Secure display form (enters Password Dialog)

Anchor all objects into position (disables on-screen object editing)

Object locator (border objects under pointer and lists them at screen base)

Save list of dependent files, media files, etc., used by current display form.

Presentation object properties. +Ctrl to reset and relaunch presentation.

Edit Toolbar



Pull-down Menu Location

Format Menu

N/A

N/A

Format Menu

N/A

Tool Properties

Bold Text for current object

Italic Text for current object

Shadow Text using bg color on overlay object

Flash Text between foreground and flash colors

Align Text Left within object

Align Text Centre within object

Align Text Right within object

Overlay Object, removes background color

Increase text size within object

Decrease text size within object

Dynamic text sizing (real-time expansion with object)

Shift text down within object

Shift text right within object

Shift text left within object

Shift text up within object

Set foreground color of selected objects

Set background color of selected objects

Cycle cache of text display

On-Screen Editing

The mouse buttons support the following functions. Object dragging and resizing affects the priority (top) object above index 0.

Left mouse button

+ Shift Key

Performs all menu operations. Drags and resized object/s with Selection enabled.

Allows unselected object to be dragged (shifted) to a new position.

+ Control Key

Allows unselected object to be drag resized.

Double-click

Displays the main Object Editor dialog for the priority object under the mouse pointer.

Double-click + Shift Key

Displays the main Object Editor for the object underneath the object clicked. Keep the mouse pointer stationary and press Escape to remove the editor and repeat the procedure for the next object below and so on. Refer to page 19 for object finding and accessing.

Either of the above two + Control Key

Displays the Advanced Object Editor Dialog Box, showing additional Object properties for the targeted object.

Right mouse button

Drag position unselected priority object.

Double-click

Displays the system pop-up menu for system feature access during full-screen mode.

+ Control Key

Drag resize unselected priority object.

Tool tip prompts appear as the user moves the cursor over buttons and menu or dialog box items. ViewPoint's in-built help is available via the F1 function key, or by clicking on the help menu or symbol (ℹ) and clicking on a button, box or feature.

Note about selecting: after selecting an object, selecting another object will not disable the initial selection but group them. Reselect the same object to disable, or use the global disable control (see Object Toolbar description). By holding the shift key down it is possible to draw a box to encompass all the objects that you want selected. Be aware that objects that are underneath are also selected (see page 19).

Basic Display Form Design – object-based

ViewPoint is objected-oriented both in terms of the C++ programming language used in its development and in the *freeform*™ Objects used to create the forms. Sharing a fundamental design feature similar to biological organisms, ViewPoint’s *freeform* Objects each contain a complete set of the application’s feature set, or ‘genome’, making it much easier to build extended and more flexible features.

A B C D E F G H I J K L M N O P Q R S T U V W X Y Z

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25

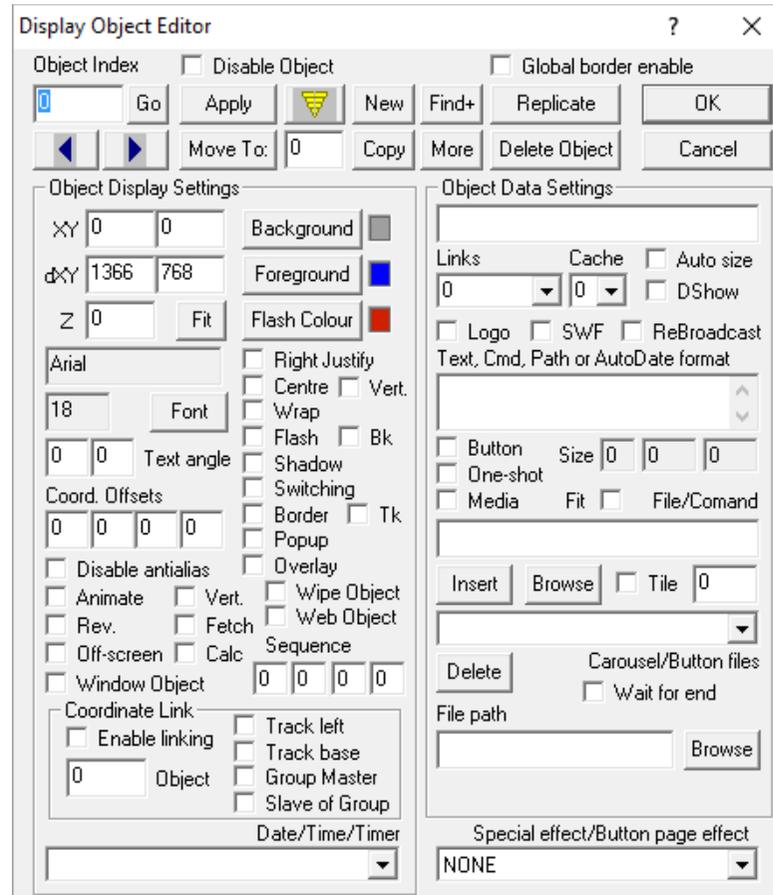


Figure 2 shows the Display Object Editor. With this dialog box you can change nearly all of the characteristics of an Object. Objects can display data, play video or sound, accept user input or control events.

At first sight the Object Editor may seem complicated, but on closer inspection you'll see that it isn't. For example, at position 7D the Object's coordinates are stored in terms of x, y and delta x (width), delta y (height). You can also position the object by pressing the shift key + mouse left-button and dragging it to the required position.

To the right of 13F is the Font button. Click this and a standard font dialog box appears.

To enter text, you can type directly into the Object on-screen, or enter multi-line text in the edit box shown at 10P. To add a border or make the text flash, see the check boxes to the right of 14H.

Display Object moving and stretching

Position the cursor over the Object and either use the right mouse button or hold down both the shift key and then the left mouse button to drag an Object across the screen.

Hold down the control key and then the left/right mouse button to stretch an Object – you will be unable to stretch an Object to less than a 5x5 pixel box. To make specific changes to an Object, double-click on it or click the Edit Display Objects icon.

Entering Text

Create an Object to encapsulate the text. Position and stretch as required.

Move the cursor over the object and begin typing. The + and – keys are used to control font size. To enter these characters, just double-click over the Object and the editor will appear. Enter these characters into the text box at 10P.

Use the Enter key to move text to the next line at the object end or use 'Wrap' in the Object Editor. Use the + and – keys to grow or shrink the text. Use the object editor to set the font, line spacing and other attributes such as overlay (which removes an objects background color).

Changing the attributes for multiple objects

Select all of the objects that you want to change by holding Shift and stretching the selection box and then double click on any of them. Any changes that you make to that object will be copied to the currently selected objects when you click Apply or OK buttons.

Assigning Media Files

Simply click on the 'Browse' button underneath the 'File' textbox to search and locate the file, or type the path directly into the textbox. Images displayed within objects will be scaled to the object size if they do not match that object's exact pixel size, unless tiling has been selected. Scaling reduces image quality and significantly increases processor overhead, however, it makes initial form layout easier. Tiling is enabled by clicking the check-box at 17U, which is mainly used for background patterns.

You can size the object around the image file by clicking the 'Fit' button. Image dimensions are detailed in the boxes above 'File/Cmd'. Image formats supported are JPEG and BMPs (recommended for efficiency). Video files can come as AVI's, MPEG or MOV (if quicktime is installed) and WAV or MP3 sound files. MVP also supports Shockwave Flash and will soon be supporting PowerPoint files.

Displaying the date and time

The time and date can be displayed anywhere on the screen, any number of times and in any range of formats. A standard set of formats can be found by dropping-down the control at 24V. Click on the down arrow to view the selection. Pick the format you want to be displayed then edit the Font settings and colours, and position the display object as you need.

ViewPoint supports two methods to create formatted date or time strings.

1. To create your own special formats in English only, select the first time format shown as “10:30”, and then type a format string into the text edit box at 10P, such as, %A %d %B %Y, which displays today’s date on-screen.

1. Format codes used to create Date and Time display strings in English

%a	Abbreviated weekday name
%A	Full weekday name
%b	Abbreviated month name
%B	Full month name
%c	Date and time representation appropriate for locale
%d	Day of month as decimal number (01 – 31)
%H	Hour in 24-hour format (00 – 23)
%I	Hour in 12-hour format (01 – 12)
%j	Day of year as decimal number (001 – 366)
%m	Month as decimal number (01 – 12)
%M	Minute as decimal number (00 – 59)
%p	Current locale’s A.M./P.M. indicator for 12-hour clock
%S	Second as decimal number (00 – 59)
%U	Week of year as decimal number, with Sunday as first day of week (00 – 51)
%w	Weekday as decimal number (0 – 6; Sunday is 0)
%W	Week of year as decimal number, with Monday as first day of week (00 – 51)
%x	Date representation for current locale
%X	Time representation for current locale
%y	Year without century, as decimal number (00 – 99)
%Y	Year with century, as decimal number

2. To create your own special formats in the local language, select the time format following “10:30”, and then type a format string into the text edit box at 10P, such as, dddd d MMM yyyy, which displays today’s date on-screen.

2. Format codes used to create Date and Time display strings in the Local language

d	Day of month as digits with no leading zero for single-digit days.
dd	Day of month as digits with leading zero for single-digit days.
ddd	Day of week as a three-letter abbreviation. LOCALE_SABBREVDAYNAME
dddd	Day of week as its full name. LOCALE_SDAYNAME
M	Month as digits with no leading zero for single-digit months.
MM	Month as digits with leading zero for single-digit months.

MMM Month as a three-letter abbreviation. LOCALE_SABBREVMONTHNAME
MMMM Month as its full name. LOCALE_SMONTHNAME
y Year as last two digits, but with no leading zero for years less than 10.
yy Year as last two digits, but with leading zero for years less than 10.
yyyy Year represented by full four digits.
gg Period/era string. CAL_SERASTRING.

The date and time are displayed from the ePC's real-time-clock (rtc), which is synchronised across networked displays to a world time-standard source.

Finding and Accessing Objects

Overlaid display objects

Complex display layouts can be achieved by using the switching and flashing attributes of display objects. Objects can be placed at the same position on the display to switch between each other, showing alternating data or images, for more information, refer to the 'Animation Techniques' section starting on page 23. However, as displays get more complex, you will need to keep track of your objects.

Priority

The higher an Object's number the greater its display priority. i.e. Object 7 will be displayed 'on top of' Object 6. Use the Object editor's Move To button to change positioning and hence overlay priority. Note: new objects are drawn in numerical sequence order.

Accessing 'Hidden' Objects

Overlaying Objects can make it difficult to access "hidden" Objects. You can step through Objects sequentially in the Object Editor, or use the inverted yellow "drill-bit" icon in the Object Editor to cycle through layered objects, whose coordinates are within those of the current object. Clicking this icon with the shift key down reverses the direction of the "drilling".

Alternatively, you can burrow through Objects by holding down shift and then double clicking on an Object, hitting the ESC key to clear the Object editor dialog, and double clicking again (holding the mouse still). This will cause the system to ignore the last Object found at that position and search down for underlying Objects.

Methods for keeping track of objects

There are several methods to keep track of the index number and positioning of an object. The first simply involves giving each object a unique name in the 'Object Data Settings' textbox at 7P. By moving through the object index you will be able to see which objects have 'priority' and which are 'hidden'. You can also use the 'Find+' feature to search for the unique object name, or, if it does not have one, search for the name of the media file assigned to it.

To locate the position of a certain object without referring to its coordinates, simply view the objects properties in the Object Editor (by cycling to it), pick a foreground color in contrast with the display (which you can revert later) and click the 'Border' checkbox. Move the Editor around the screen to spot the object, but will only be able to do so if it is not 'hidden' by another object.

Another aid is the 'Object Locator', which is a useful Tool found at the end of the second Toolbar. When selected, all objects at the pointer coordinates are highlighted and are the index number, in order, of each are listed in the bar at the base of the screen.

Advanced Object Properties


The dialog shown below includes features for advanced application design. As designer's requirements change, and as new technologies become available, new facilities are added that can be controlled through this dialog. ViewPoint allows you to choose a variety of sources for the image, video, sound or data to be displayed or played, from static objects such as files, to dynamic data, linked from databases or remote data streams. Dialog entries will change mode depending on the type of Object specified, for example, a simple text string or a date-format string – ViewPoint recognises the difference. Objects can even change from wipe region delimiters or active buttons for multimedia kiosk applications to live video windows. This level of flexibility increases complexity, however, the features remain, individually, easy to use.

Interactive Displays

Not only does Midas Viewpoint cater for Shockwave animations, the running presentation can be controlled via mouse, keyboard and a host of other peripherals.

Objects can serve as interactive 'buttons', such as those found in web pages, which can respond to the mouse in/out/click input of the mouse and control the behaviour of other objects or open new display forms. Clicking the 'button' check box in the Display Object Editor sets the object as an interactive field and the command for the mouse-click is entered into the 'File/Cmd' text box. The list of button commands can be found on page 49.

Figure 3 – Advanced Properties Dialog Box

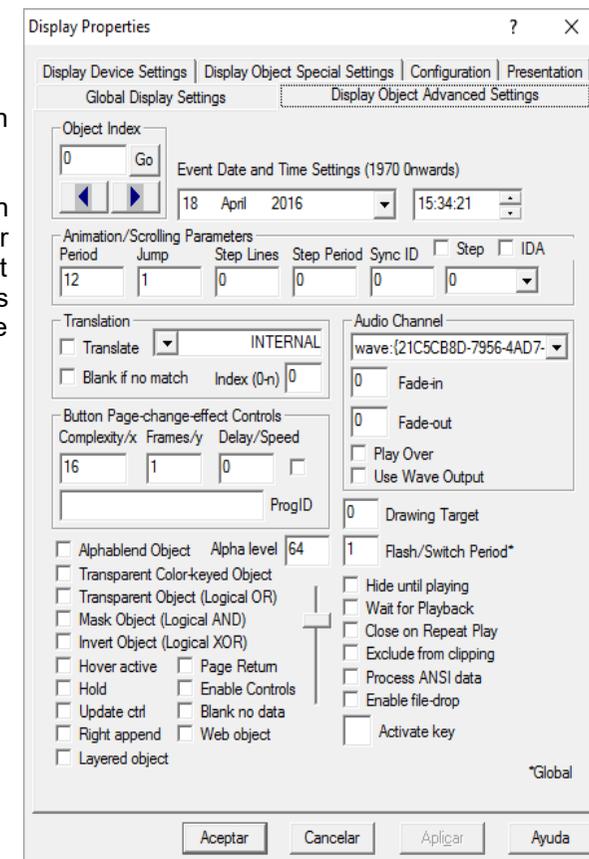

Button Up/Down States

You can assign two images to an object that will switch over when the mouse pointer is over the object. Use the browse button to find the bitmap file for the 'down' state (when mouse is over) and click add to include the image in the object carousel. Repeat the procedure for the button 'up' state. With both bitmaps in the object carousel, the image file in the 'File/Cmd' text box will have to be removed to enter a command for the button.

Additional Button States

By adding a third image to the button file list, you will give the object a third state for when the object is clicked (when the mouse button is down the third file will be displayed). The fourth file can be used as either an additional sound file for the on-click function or as a movie to play in the object when clicked. The movie will continue to play until the form is closed and restarted when re-clicked. A fifth file can provide a sound/movie file for the mouse-over function.

Controlling other objects by mouse clicking

Objects that become active when a button object is clicked are known as 'Pop-up' objects. The pop-up check box is found in the Display Object Editor and causes the object to become invisible until activation. By having another object beneath the pop-up object you can create up/down states for other objects activated by a button.

In the Object Editor for the button object, type the number of the pop-up object in the File text box to allow the button to control that object. For multiple objects put a comma between each entry (i.e. 1,2,3,4,5,6). You can use this feature to bring up a multitude of objects, such as an animated bitmap object with an invisible (overlaid) object that plays a sound file to accompany the graphic.

A standard feature of the pop-up mode involves the pop-up object disappearing when either the button is re-clicked or the pop-up itself is. To revert control to only the button object, select the 'Hold' check box in the Advanced Properties box for the pop-up object, which freezes the pop-up until told otherwise by the button. It is possible to make pop-ups alternate when using the same button. For example, if a single button makes pop-up A appear, pop-up B disappear and vice versa when re-clicked, only select the 'Pop-up' check-box of one object. Now click the button to make it disappear and select 'Hold' for both objects to keep them in place. The button will now alternate the objects.

NOTE: the objects that are visible when the display form is opened are dependent on their status when you save the form.

Controlling other objects by mouse positioning

It is also possible to control other objects by moving the mouse pointer over a button as well as clicking it, allowing a set of objects to respond to the a mouse-over and a set that would only activate with a click. However, ALL objects linked to that button will respond to the mouse click.

Objects that are activated by the mouse pointer are called 'Hover-Active Objects', and this check box needs to be active in their Advanced Properties dialog. Also, a Hover Active global switch must be enabled in the Display Properties.

Without the Hold switch enabled, all Hover Active objects become visible when the mouse pointer is within the co-ordinates of the button. With Hold enabled, the object status changes every time the pointer enters the area. Alternate switching of Hover Active objects is not possible.

Button Effects

You can assign a transitional effect that will activate on clicking a button object and blend the current form to destination display form. Click the 'Animate' checkbox in the Object Editor and down the 'Display Effect' selection box and pick a transition from the list. The parameters for transitions can be found in the Advanced Editor and control speed and duration. The first list of transitions (in higher case characters) are 2D effects, as opposed to the 3D effects in lower case, and require much higher parameter figures to enable them to work. The 'Reverse' checkbox in the Object Editor plays the transition effect backwards, e.g. a left-to-right alpha-blend wipe can switch to right-to-left.

Using the 'Page Transition Control' in the Display Properties dialog, it is possible to assign a transition to a specific page whenever it appears. However, when opening a form from a button click, the button effect will override the page effect. Buttons A, B, C and D on different forms (or the same form) can all refer to the same destination form, each with a different transition.

Button Command List

The button command text must be entered in the 'Text, Cmd...' input box below the 'Media' checkbox in the Display Object Editor.

Command list:

```

cmd_next           // Go to next page in slide-show
cmd_prev          // Go to previous page --
cmd_wait          // Pause the slide-show
cmd_close         // Close the application
cmd_inctv         // Increment TV channel (TV/Video adapter hardware required)
cmd_dectv         // Decrement TV channel
cmd_settv         // Set TV channel i.e. "cmd_settv=36"
cmd_minimize     // Minimize the application
cmd_inc           // Increment number displayed in object, i.e." cmd_inc : 7" < dincrements object 7's number display>
cmd_dec           // Decrement --
cmd_zero         // Zero number --
cmd_srp           // Select remote page i.e. "node=102 page=c:\midas\mypage.dfm"
cmd_crs           // Capture remote screen to the specified object i.e. "cmd_crs node=102 object=7"
cmd_stx           // Send text message, i.e. "cmd_stx node=102 target=12 source=4"
                    <- Send text in object 4 to node 102's object 12
cmd_snxt         // Send next page selection cmd i.e. "cmd_snxt node=102 or group=3"
cmd_sprv         // Send previous page selection cmd
cmd_slck         // Send lock message, i.e. "cmd_slck node=102"
cmd_sulk         // Send unlock message, i.e. "cmd_sulk node=102"
cmd_sck          // Set background of object to the video overlay

```

The following command can be used in the master script (carousel script text box) to restart the system at a specified time.

```

cmd_reboot       // System reboot

```

Commands can be added to the application on request to suit specific applications.

Specific programming examples are available from www.sentel-advance.com website.

Built-In Animation Techniques

Midas Viewpoint provides several methods for creating in-object animations, Carousel, Switching, Scrolling, 2 and 3D animations and Sequencing, each are useful for different objectives. For the Carousel, Switching and Sequencing animation features the timing between objects/images is measured by a global screen rate, known as a 'flash period'. You can change this rate in the Advanced Object Editor, and can set the time between each redraw by changing the 'Object Update Period' value in the Display Settings. This value is in milliseconds (1000ms = 1 second). Sequencing also allows other media in an animation, such as movie files and Shockwave Flash.

Method 1 (Basic) – Object Image Carousel and Switching

The most simplistic form of animation involves assigning multiple images to a single object and displaying them one a time. Each object has an image carousel system that can hold a maximum of 12 bitmaps, resulting in every image having the same size, position and properties. Enter these by browsing in the Object Editor to the file that will become the first frame, and click 'Add' to include it in the carousel.

Repeat the procedure for each of the remaining frames (up to 11) before removing the last file from the Display File text box (this file will override the carousel). Click OK to start the animation.

Switching involves alternating between two objects, each with their own image file, creating a very simple two frame animation, each object with their own size and properties. To create a switching object field, two objects need to be overlapped, with the 'Flash' checkbox enabled for each. Next, the 'Switching' checkbox for the priority object (the highest index number) is clicked to start switching. Be aware that the object animation only occurs where the objects overlap.

It is also possible for other objects to be involved in this switching animation, but must have a lower index number than the Switching object and will only be visible with the other (non-switching) object in the animation, so shouldn't use the same co-ordinates or it will not be seen.

By following the Database guides in the Tutorials and Dialog box sections of this manual it is possible to assign the objects in switching animations to the database for remote image replacement.

Method 2 (Complex) - Scrolling Animation and 2 and 3D Animations

The Scrolling animation technique uses the same method for scrolling as explained in Tutorial 3. Using a film reel as analogy, it involves attaching multiple image objects (single frames) to one large scrolling object, acting as a film reel, running through a viewer object (the projector). While more complex to construct than the Carousel animation, this feature provides a much wider range of display control options within selected screen areas, such as the ability to reverse the scrolling direction by just clicking a checkbox and setting smooth scrolling, or frame-jump scrolling. This method is more suited toward rapid progression through a large number of frames. Like switching, you can also Database link the image objects.

As a film reel's length is related to the number of frames it contains, a scrolling object follows the same principle, but using an offscreen object to contain all the frames. Depending on graphics hardware and system memory it is possible to create a scrolling object with a maximum length of 32,768 pixels. You can use this object to animate 327 frames of 100 pixels in width.

The 2 and 3D Animations offered include around 50 effects, from left-right wipe, to fade to curtains, etc. Simply enable Animate in the Object editor, and select the effect required in the "Display effect..." control. The object will use this effect when it is active in a sequence of objects, for example. Normally, a number of objects of the same size are placed in the same area, with the sequence numbers set to activate them with the required effect one after another. Other uses are also possible and will be explained in the tutorials.

Building a scrolling animation

When building a scrolling object for the first time, your Display Form resolution (size of object 0) should be sufficiently large to show the entire source-object for the scrolling region, and as such, it could be larger than your monitor's resolution. If this is the case, what we can do is set object 0 to a resolution as large or larger than the source object. With experience, you will easily be able to create scrolling objects by using the object editor, but in this case, we will create the off-screen scrolling source on-screen to ease object layout and give visual verification.

To start, create a new object by clicking the (index 1) and open the frame image file. Apply the file to the object and click 'Fit' to resize the object to the bitmap dimensions. Now, you will have to calculate the size of the scrolling object and change the Y coordinates accordingly to hold the desired amount of frames. Next, click the 'Off-screen' checkbox in the Object Editor to place the object in the off-screen cache.

There are two ways of importing images into a Display Form. First, you can shrink the application to window size and drag the bitmaps from the desktop / explorer to Midas. This will place each image in an object in a vertical line. Set the position of the first object to coordinates 0,0 and use the align and abut tools in the Toolbox to eliminate gaps between the objects.

We will be attaching the objects containing individual frames to the off-screen object, which sets the coordinates in relation to that object not the background, so 0, 0 will be the top left hand corner of the off-screen object.

For smaller amount of frames, you can also import the images manually within MVP by first creating a new object and assign the first frame image to it. Fit the object to the image and set the position coordinates to 0, 0. Using the object replicator, second row in the Toolbox, copy the object down the screen for the desired number of further frames, leaving no gap between duplications. Now go through the frame objects in the Object Editor and add the image file to the relevant object in order of sequence.

Once the objects are correctly positioned, hold the shift key and drag a selection box over all the objects. Continue holding the shift key and double-click one of the frame objects to enter the Advanced Object Editor. In the 'Drawing Target' text box enter '1' (the index number of the off-screen object). This attaches all selected objects to the off-screen object, resulting in their disappearance once the dialog box has been closed. Once this has been done, you can re-adjust the Form resolution to match the Monitor or copy the objects before drawing them off-screen and paste them into another Display Form, perhaps previously designed to accommodate the animation.

Finally, another object is needed to fetch and animate the information from the off-screen object, acting like a window through which the view the animation, capturing a single frame at a time. This object has to be the same dimensions as a single frame or the scrolling object, and all frame objects attached to it, will be scaled and distorted. Open the Object Editor for object 1 and provide a name for the scrolling object that the viewer object will look for. Enter the same name in the 'Data Link' field for the viewer object and click the 'Animate' checkbox to fetch and scroll the off-screen object. Now click 'Vert' to scroll it vertically, horizontal scrolling is default and will compress the entire height of the scrolling object to the viewer object.

The Animation Parameters for this object are found in the Advanced Object Editor, quickly accessed by clicking 'More' in the Object Editor. The 'Period' text box defines the time (value x Object Update Period) between frames (greater the number, slower the animation). The 'Jump' text box refers to the pixel line jump between frames. By entering the frame height here, the scrolling object will jump frame by frame, each being displayed in the same position. It is possible to add, remove or change frames by calculating the length of the scrolling object and working out a frame objects position by its coordinates within it.

Method 3 (Moderate) - Sequenced Animation

The final method of animation is an advancement on the 'Switching' technique mentioned earlier, and can use any number of objects, incorporate different types of media and use MVP's transitional special effects between objects. This method is recommended for making great looking displays, bringing more excitement and interest to otherwise motionless screens and static images.

The controls for sequencing reside at the bottom of the Display Object Editor and consist of three figure boxes.


Right-Hand Box: The number of the sequence. Multiple sequences can be displayed depending on sequence size, media size and system performance.

Centre Box: This figure is a multiplication of the Object Update Period (in Display Properties) and provides Viewpoint with a marker from which to loop back to the beginning of the sequence.

Left-Hand Box: Also a multiplication of the Object Update Period, the left-hand figure box determines the current object's place in the loop; at what point to appear or start a transition.

Example Timeline:

This diagram shows the timeline for a short sequence of three objects in a loop. The Object Update Period is set to 1000, meaning that a period figure of 1 entered into the sequencer equals 1 second. The sequence loop lasts 15 seconds, so 15 will be the figure entered into the Centre Box, while 1 would be entered into the Right-Hand Box as this is the only sequence.

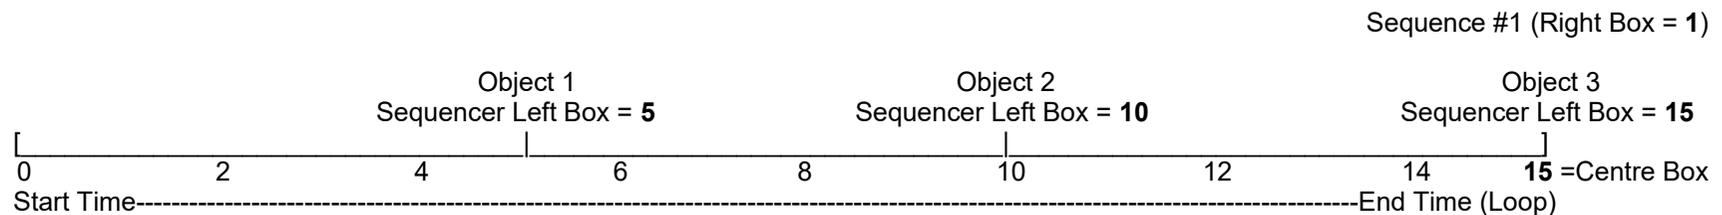

Object 1 has '5' entered into the Left-Hand Box, and appears 5 seconds into the sequence, while object 2 has '10' entered and '15' for object 3 resulting in a 5 second gap between objects. The reason why there is no object at 0 is the fact that the object may not be redrawn in time if the current page had a transition effect when opening from the previous page. You can solve this problem by having a copy of object 1 as a static object beneath the sequence (move it so it has a lower index number) that will appear when the page opens. However, this would mean that object 1 would be in view for 10 seconds, in which case object 2 could be the first sequenced object.

There is a quick and easy way of placing a large number of objects that have equal size and properties in sequence using the Object Replicator. Accessed from the second Toolbar or from the Object Editor, the Object Replicator allows you to copy the currently selected object/s but also input an additional value for the object sequence entry (Left-Hand Box) which will be multiplied with each repetition. For more information on the Object Replicator refer to 'Figure 2 – Display Object Editor' in the Dialog Box explanation section.

Applying a transitional effect to an image object is the same as button effects, click the 'Animate' checkbox in the Object Editor and select an effect from the 'Display Effect' drop-down box. The parameters for transitions can be found in the Advanced Editor and control speed and duration. The effects in capitals are 2D and require much larger figures to operate. The 'Reverse' checkbox in the Object Editor plays the transition effect backwards, e.g. a left-to-right alpha-blend wipe becomes a right-to-left wipe. The effect applies to the object as it becomes visible.

To play other types of media in the sequence, simply assign them to a sequenced object, however, inter-object transitions do not work on anything apart from image files. If a transition is required, a 'screen-grab' of the first frame of the movie/flash file (using video capture software or the Windows 'Print Screen' facility, depending on the file) can be used as an image object that appears just before the media file. The image object would allow a transition before immediately playing the flash file/movie.

Be aware of the size of objects in the sequence. Movies are, more often than not, 4:3 in ratio and may require it's own individual object size to prevent stretching. In which case you may want to think about having an object to act as a background or border around the movie as it plays.

Video Overlay Overview – Real-time Video Mixing

The ePC-V eMedia system provides advanced video facilities that can be controlled using three methods.

Method 1 – User interface – keyboard and mouse

The user interface allows display setup and the layout of text, graphics and video. Video overlay is achieved by setting a *freeform*TM object to video overlay mode. This object then displays live video from one of three input sources, composite, S-VHS and the UHF tuner. Note: only one object should be set to video overlay mode unless you have a multichannel ePC system. This object can also be set to overlay video over display objects that are positioned below it. Objects are displayed in priority matching the objects index, for example, object 3 would be displayed over object 2, and will obscure it unless object 3 is set as an overlay (not a Video Overlay object [advanced object properties] – just a graphical overlay).

Method 2 – Private Packet Protocol

The user interface is initially used to layout the display, adding such items as the video overlay object itself, automated date and time display objects, and any text and graphical objects that may be needed at specific positions.

Once the layout is completed, settings are made to select the input device.

Incoming packet data can then be used to set the text in the display objects that have already been positioned on-screen using the user interface.

Method 3 – ANSI Serial Protocol

Using the same user interface layout tools as required to setup mode 1 and 2, once the layout is completed, the serial input device is set to ANSI VT100+. Serial data is then displayed within the confines of the *freeform*TM object that has been set to receive ANSI data; normally the same object as used for Video Overlay. Note: Presently, only one object should be set to receive ANSI data.

Most of the standard ANSI escape sequences are supported, and those that are not are ignored. In addition to the standard sequences, a set of private sequences support specialized functionality using the RVT private protocol, as used by earlier generation overlay devices, such as the IVC401.

The font used for text display is held in the ANSI display object. The ViewPoint object editor can be used to select a font other than Courier New, bold, point size 16, however, this particular font is non-proportional, and can be used to match the 40 or 80 column text display matrix. Dividing the width of the display object by 40 or 80 sets the width of each character position. This means that the widest character (normally 'W') must fit within the bound of a character position. Double height and width characters are also supported, but again, they should be selected to fit within the boundaries of two character positions. Received text is displayed within the ANSI-mode enabled object, which may be as large as the screen or smaller, and with or without background. To enable the display of character backgrounds, issue the sequence **ESC { 16 S** and to disable, issue **ESC { 0 S**.

The overlay function is controlled by a color-key, which is pure magenta; any other colors will be visible when overlaid onto video. To select double height characters issue **ESC { 0; 2 A**, double width, **ESC { 0; 8 A**, and both, **ESC { 0; 10 A**. To select small characters, issue **ESC { A**.

The standard Video Overlay page is named video.dfm, and stored in the c:\midas subdirectory. The ePC is usually configured to load this page automatically at start-up. If you modify this page, we suggest that you first save it under a different name so that you have a copy to revert to if needed. For further information on video overlay objects and video device settings, please refer to the video overlay guide, part of the Display Device Settings dialog box description elsewhere in this manual.

The Operational Properties Dialog is set for Private Packet data mode. Change the serial port setting in the "Command and Data Source" group, to select the required mode. Note: RS485 support requires an optional board to be installed. After reading the "Private Packet Protocol" section and the Operational Properties Dialog Box details the key points will become clear.

Live Video Overlay

Midas ViewPoint (MVP) supports a range of video I/O cards that allow the processing of live video from external sources, such as TV, cable, cameras and video players. To enable a *freeform*[™] object for video overlay display, enable the "Video Overlay" check box in the Object Special Settings Dialog Box. All required settings are made using the Display Device Settings dialog box, and the additional video card specific Properties dialogs.

It is important to note that most video cards use hardware color keying to select the area of an object that keys live video into the display. Most cards tested use the RGB values 16, 0, 16 or 0, 16, 0 as the color key, however, this can vary depending on the hardware implementation. If the default overlay color key fails to key-in video, and no warning messages are issued by MVP (ensure that MVP is in "Workstation mode" – Operational properties), enter the command "cmd_sck" into the 'Text, Cmd...' text box in the Object Editor. This sets the background color of the current object to the video overlay key. Edit a video overlay object's properties by moving the cursor over it, hold down the Ctrl key and right-click.

Window Objects

The 'window object' check box in the Display Object Editor allows objects, while still part of the display form, to be placed in another 'window' via hardware. A window object takes precedence over other windows on the screen, including the current display form you are running, allowing you to place objects over movie files and live video overlaid objects. Using the color key (16, 0, 16 or 0, 16, 0) as an object's background color, you can overlay text or scrolling objects (see 'Scrolling Animation' on information on creating these objects) as window objects over video. You can also key out parts of a bitmap to reveal video behind, by using the color key RGB value in an image-editing program. This can be used for borders around a movie or corporate logos over video.

Finishing Display Forms

Form Security

After you've completed the design and layout of your display forms and, if required, placed them in sequence using the Carousel Script (see Figure 5 –Master Script Dialog), there are two methods with which to secure the form that can prevent accidental editing or keep other users from changing the forms.

Method 1 – Anchoring

Click on the 'Anchor' icon in the second toolbar to lock all objects to their current coordinates and prevent accidental dragging of objects by users. You are still able to change an object's properties, including their coordinates, by accessing the dialog boxes but all real-time on-screen editing is disabled. When testing interactive buttons or viewing a sequenced slideshow of display forms, it is useful to anchor the objects in place to prevent accidental changes, such as dragging button objects when attempting to click on them.

Method 2 – Password Protection

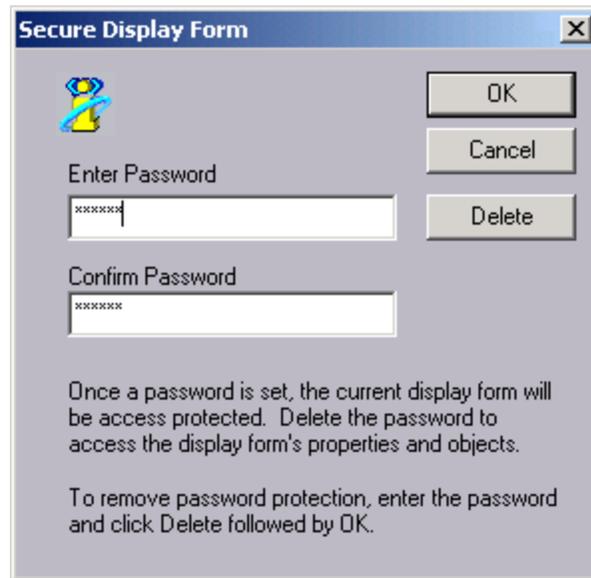


Figure 4

The 'key' icon in the second toolbar opens up the Password Protect system in the form of the 'Secure Display Form' dialog box shown left.

This dialog allows you to enter a password that, once the display is in full-screen mode (top Toolbar), will lock all object properties, disable access to all dialog boxes you and will not be able to re-enter the editing mode. No configuration settings whatsoever can be altered without the security removed.

To remove the security, press Control + F4 to close the form and reopen the form from MVP. Open the Secure Display Form dialog box, retype and confirm the password, click delete then OK. Now resave the form.

Auto-starting – configuring short-cuts

You can make Midas Viewpoint launch from the desktop by configuring a desktop short-cut. A copy of this short-cut can be placed in the Start-Up menu of the OS so the display form or sequence will automatically run every time the system is started up. The short-cut can also be modified to display the form in full-screen mode.

In the 'Target' text box type the destination program in inverted commas "C:/Program Files/Audio Visual Computer/Midas Viewpoint/Bin/Midas32.exe", or make a short-cut from this application. After this text string, type the destination of the display form (not in inverted commas) you want the short-cut to open. If you type "-b" before the string that form will open in full-screen mode, e.g.

-bc:/Midas/Worldwide/Worldwide.dfm.

Control in Full-Screen mode

To control the a sequence display in full screen, either right click the mouse to make the pointer re-appear along with a concise edit menu, or use the Left and Right arrows keys to move forward or back in the sequence. Press Alt + L to pause the sequence and again to resume. Press Escape to enter editing mode.

Focus

When a sequence is started as the system is booted, MVP will lose focus to the Windows Toolbar. The Toolbar, which will be minimized, will have priority and no keyboard commands will affect MVP. This is fine if the display is supposed to run uninterrupted, but if the forms need to be edited or other applications accessed, you will have to give MVP focus to stop the sequence or bring up editing mode.

To give MVP focus to use or close the program, either left click on the mouse (then press Escape) or right click to bring up the short edit menu. Both these methods, however, run the risk of accidental form editing if the form hasn't been secured. To change focus using the keyboard, with no editing risks, hold Alt and press Tab to run through the application icons and let go of all keys once the indicator is over the MVP icon.

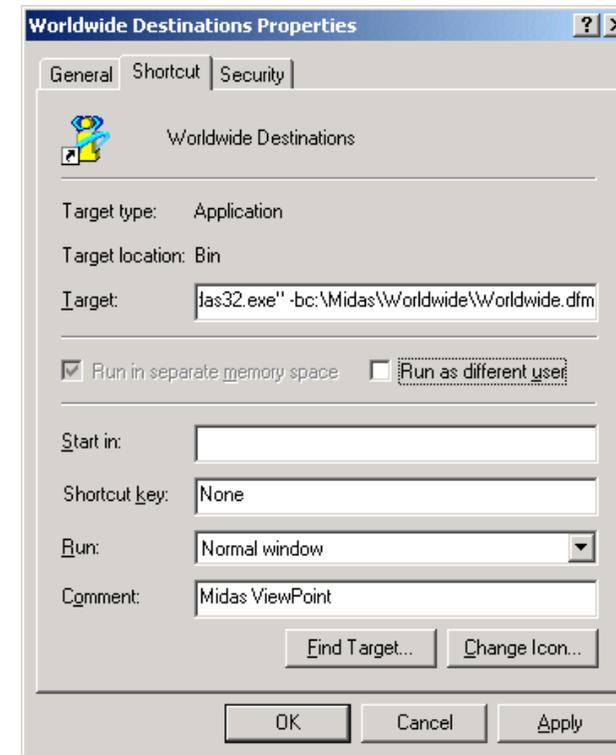


Figure 5

Dialog Interfaces


Descriptions of each feature found within the many dialog property settings

Figure 6 – Display Object Editor

Details

The Display Object Editor provides an assortment of controls to manipulate an object's basic properties, such as color, shape, media and information linking. This dialog box contains a more comprehensive selection of object editing features than those found in the toolbars. All properties are relevant to the currently selected object/s and it is possible to change the attributes of multiple selections. A number of sub-dialogs are accessible from here, such as color, font and object replicate as well as a useful find / replace system.

Access Edit Menu > Edit Display Layout

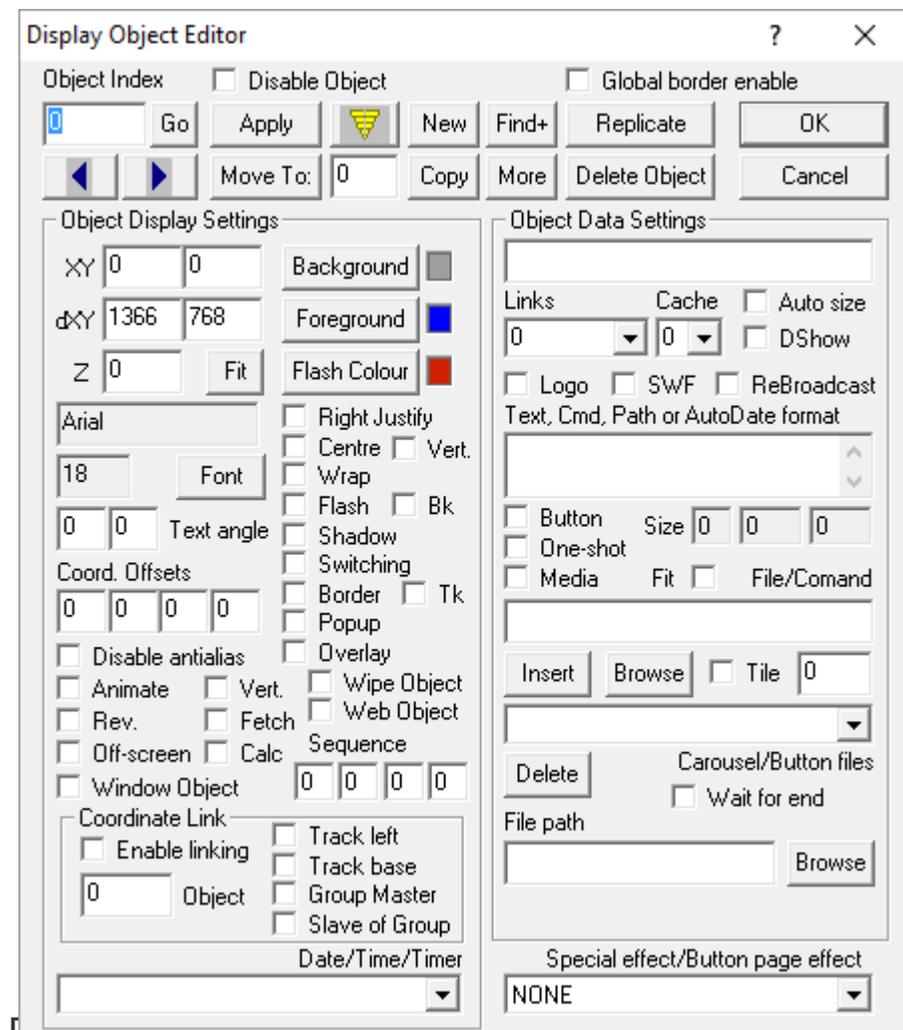

- **Object Index** – Object index number, next, back and 'go' controls
- **Apply** – Use modified settings without closing the dialog box
- **Burrow ('Drill Bit' icon)** – Shows properties of object 'underneath' current (uses same co-ordinates, with lower index number).
- **New** – Creates new objects using default settings
- **Find+** – Opens 'Find' Dialog, detailed on next page
- **Replicate** – Opens 'Object Replicator' Dialog, detailed on next page
- **Move To** – Move current object to new numerical position
- **Copy** – Create new object using current object values
- **More** – Opens Advanced Display Object Settings
- **Delete Object** – Permanently removes current object
- **Object Coordinates** – Current position (X, Y) and size (dX, dY)
- **Fit** – Resize object to fit attached bitmap dimensions
- **Default Colors** – Opens color selection dialogs.
- **Font** – Opens font selection dialog for current text
- **Text Angle / Offset** – Rotates, shifts text within an object
- **Coordinate Link** – Links object's display position to another object
- **Disable Anti-Alias** – Removes text edge smoothing
- **Animate** – Enables object animation parameter to active
- **Rev(erse)** – Reverses object animation
- **Vert(ical)** – Switches animation direction from horizontal to vertical
- **Fetch** – Fetch image background from data linked object
- **Calc(ulate)** – Calculates database figures
- **Right Justify** – Moves text to the right side of the object
- **Centre / Vert(ical)** – Centres text (X/Y) within the object
- **Window Object** – Gives object 'window' properties (see page 47)
- **Wrap** – Calculates text space breaks to shift text to next line
- **Flash / Bk** – Periodically switches text / bg color with 'flash' color.


Functions

- **Flash / Switch Period** - in Adv.dialog controls duration
- **Shadow** – Shadows ‘overlayed’ text using background color
- **Switching** – Switches between objects, data links, etc.
- **Border** – Creates a one pixel border around an object
- **Popup** – Allows 0 / 1 visible state of an object, controlled via button / commands
- **Overlay** – Makes object background color ‘invisible’
- **Wipe Object** – Automatic wipe effect (parameters in Adv. dialog)
- **Web Object** – Opens HTML within the object
- **Sequencer Boxes** – Animation sequence controls (see Tutorials for more info on sequenced animation)
- **Object Data Setting Box** – Unique object name for linking
- **Object Data Link** – Database field / other object reference
- **Secondary Links** – Object’s next text line is next database entry
- **Logo** – Non-translated database image, (database string).bmp is used instead. Folder path must be entered into Text, Cmd... box
- **SWF** – Uses non-translated database Shockwave File
- **ReBroadcast** – Transmit data from object over TCP/IP
- **Text, Cmd...** – Enter object text or command
- **Button** – Gives object “mouse-click” function for user interaction
- **One-Shot** – Stops media after finishes (no loop)
- **Media** – Uses MediaPlayer for secondary media channel. Enable ‘Exclude from Clipping’ when using MediaPlayer objects
- **File / Cmd** – Media file root / name to be played or displayed
- **Add / Delete** – Files to / from image carousel or button up /down
- **Tile** – Duplicates image, instead of scaling, to fill object
- **Carousel / Button Files Box** – Object image carousel (auto image switching or Up / Down button state image file list
- **Display / Button Page Effect Box** – Object transition effect list
- **AutoData Source** – Selects layout for time/date based on internal system clock. See Format Codes in the Display Form Design section for time/date setting commands.

Note: Understanding the interaction of the more advanced functions can be complicated, however, the tutorials explain function combinations in a step-by-step manner clearly, and if any questions remains, please contact technical support.

Figure 7 Additional Object Editor Dialogs


Find+

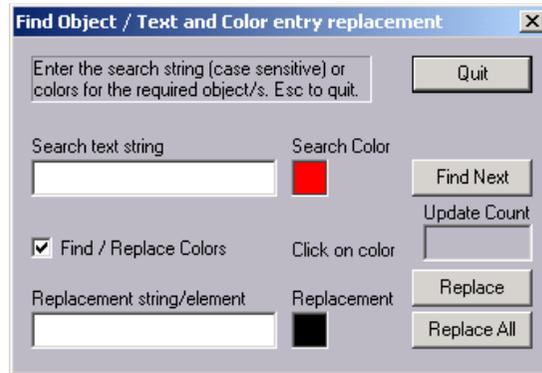

Access

Display Object Editor > Find+

Figure 8 Object Replicator

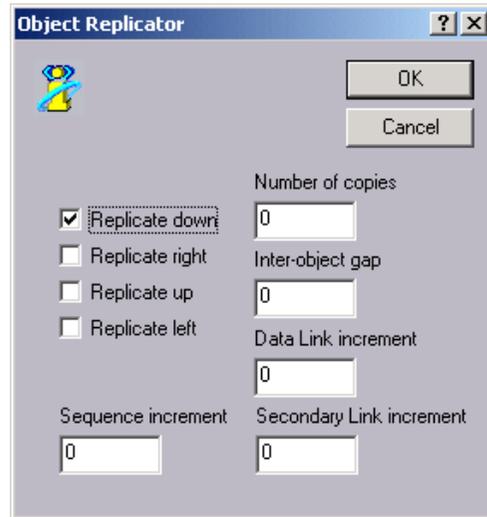

Access

Display Object Editor > Replicate

Functions

- **Search Text String** – Enter text to search for
- **Find / Replace Color** – Look for color not text string
- **Search Colour** – Enter color to search for
- **Find Next** – Switches Object Editor to next search string/color instance
- **Update Count** – Amount of objects with search string/color instances
- **Replacement String** – Enter text to replace search text with
- **Replacement Color** – Enter color to replace search color with
- **Replace** – Replace current instance with replacement string/color
- **Replace All** – Replace every instance with replacement string/color

Functions


- **Replicate Directions** – Replicates selected objects in the direction indicated. No direction will result in objects being replicated on top of one another (same coordinates)
- **Number of Copies** – Number of copies of currently selected object, not a total as this figure does not include current selection
- **Inter-Object Gap** – Amount of pixels between each repetition
- **Data Link Increment** – Takes the database field entries for the currently selected object/s, adds this value for the next object and multiplies for each repetition
- **Secondary Link Increment** – Applies the above principle to object secondary link
- **Sequence Increment** – Takes the sequence entry number (Left-Hand Box) of the currently selected object/s, adds this value for the next object and multiplies for each repetition. The other sequence values remain the same

Figure 9 – Display Object Advanced Settings

Details

The Display Object Advanced Settings (Advanced Properties) dialog provides an expanded set of features and additional parameter settings to those found in the Display Object Editor.

Fine-tuning of object animation and effects can be achieved using this dialog as well as other object specific behaviour traits, including translations.

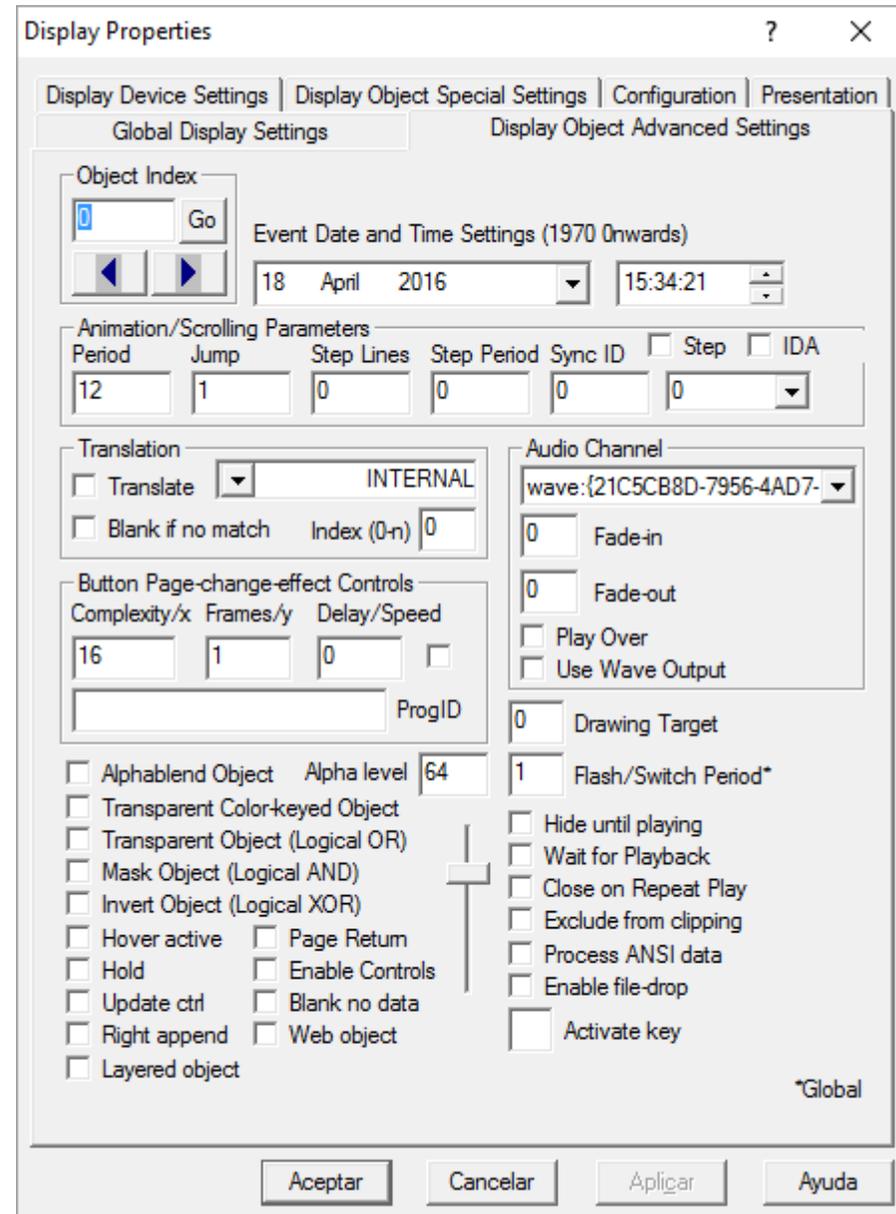

Access

Edit Menu > Edit Advanced Settings

Functions

- **Event Date and Time Settings** – Date and time of event (used by countdown/up feature)
- **Step** – Enable scroll animation stepping
- **Period** – Time in ms between animation/scroll updates (determines actual frame rate)
- **Jump** – Sets the number of pixels to move each update (speed)
- **Step Lines** – Number of pixel lines per step – used to achieve multi-line scrolling regions
- **Step Period** – Time in milliseconds between steps
- **Sync ID** – External sync. pulses trigger animation events, stepping, etc., using ID codes (supports synchronisation)
- **Translate** – Enables data input translation for this object
- **Blank if no match** – Controls translation/status message output
- **Translation Table** – Select the table source for translations
- **Enter index (0-n)** – Index of status message; 0 = use 1st translation, 1 = use 2nd, etc.
- **Fade-In** – Fade the audio playback in
- **Fade-Out** – Fade the audio out
- **Play Over** – Reduces background audio level while playing
- **Wave Output** – Wave channel for sound output use
- **AV Channel** – Object plays mpeg video & audio using the selected channel (supports multiple channel outputs)
- **Complexity** – Relates to page-transition effects
- **Frames** – No. of display frames for page-transition effect
- **Delay/Speed** – Page-transition effects (0 = fastest. 100,000 = very slow)
- **ProgID** – ID of transformation effect
- **Drawing Object Target** – Used to direct object to draw within an area of the target object
- **Flash/Switch Period** – Globally sets the speed of flashing, switching and updating
- **Alphablend Object** – Display objects merged with background
- **Alpha Level** – Setting for alphablend level
- **Transparent Object (Logical OR)** – OR's the bitmap object's color values with the underlying bitmap object
- **Mask Object (Logical AND)** – AND's the bitmap object with underlying bitmap object
- **Invert Object (Logical XOR)** – XOR's with the underlying image
- **Hover Active** – If a button object, the button is hover activated
- **Hold** – If the object is a popup, keeps the popup visible until deactivated
- **Update Ctrl** – Control the update of this object by command only
- **Right Append** – Text is displayed formatted to the right of the object
- **Page Return** – If a button object, will display the page previously displayed on clicking
- **Enable Controls** – Enable controls on selection..
- **Blank No Data** – Disable all translate background drawing if no data/match
- **Web Object** – Enables the display of html/xml web documents/sites within the object
- **Video Overlay Object** – The object displays video from a video channel
- **Wait for Video Playback** – Causes drawing to wait until video devices starts playing
- **Close on Repeat Play** – Closes and restarts video playback to achieve replay
- **Exclude From Clipping** – This object's area will be written over by other objects
- **Process ANSI data** – Displays an ANSI text stream from the selected data source
- **Enable File Drop** – Drag drop when form password protect
- **Activate Key** – Enter the key used to active this button object (A-Z, 0-9, etc)


Tip: To access this dialog for a particular object, hold down the control key and double-click the object. Alternatively, select 'More' in the

Figure IO – System Control Centre

Details

The Control Centre dialog provides networked display system management over local or global networks. It also enables the user to create and edit display schedules, for one or many displays, and across the entire network.

Using Internet standard TCP/IP protocols, the system communicates with remote clients over any network, including the Internet. Being an open-standard, TCP/IP is used across local and wide-area networks, including satellite, cable and cellular phone systems such as GPRS and 3G.

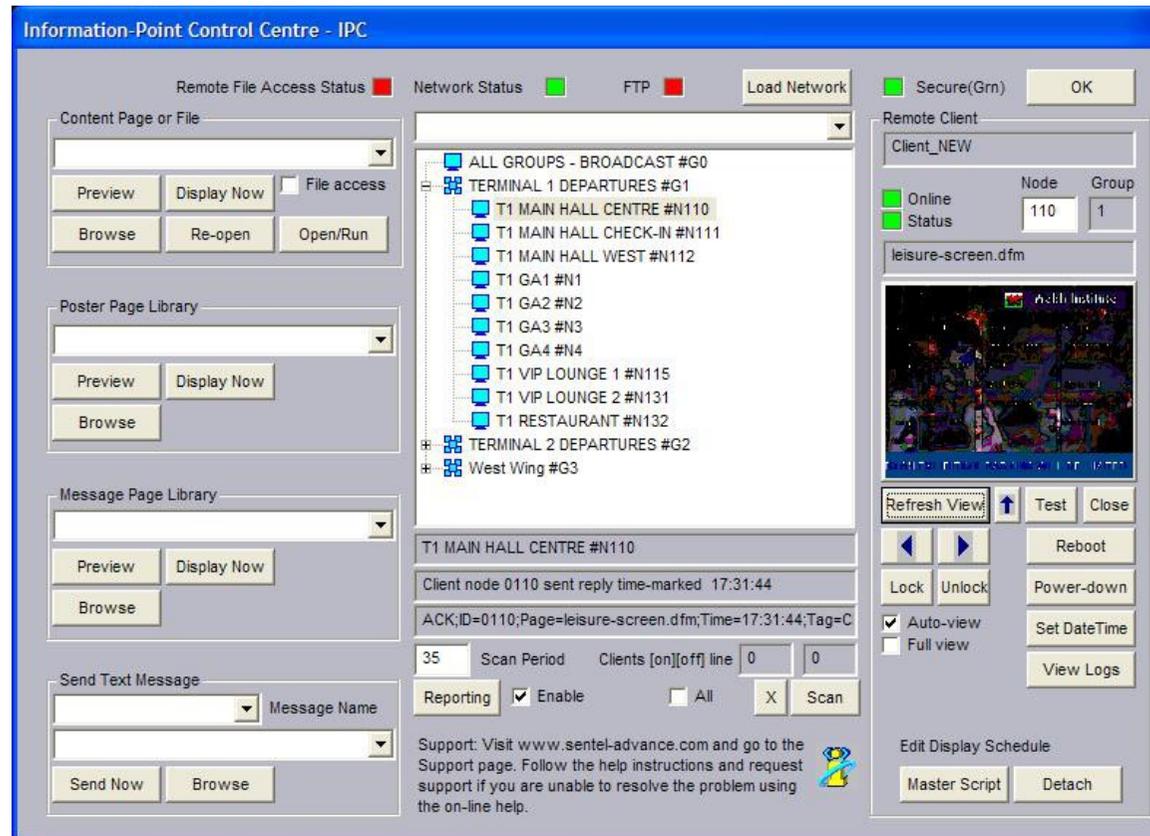

Access System Menu > Control Centre

Functions

- **Display Form** – To browse and apply forms to a specific group or client
- **Poster Library** – List posters from the library directory.
- **Message Library** – List messages from the message directory.
- **Edit Automated Display Script** – Create and enable/detach scheduled display scripts.
- **System Network – Viewer Window** – Shows the currently selected image.
- **Remote View** – Shows the clients display currently displayed on the selected ePC.
- **Display Lock** – Locks the display of the selected client.
- **Test On-line** – Test the status and response timing of the selected client.
- **Power Down** – Powers-down the selected client/s.
- **Audio Off** – Disabled audio output from the selected client/s.
- **Send Message** – Send instant messages to the selected client/s.
- **Refresh View** – Captures client display in viewer window
- **Auto View** – Automatically updates the viewer window with current client display
- **Full View** – Full screen remote capture
- **Arrow Up**– Full view sets client display to full screen mode
- **Arrow Left/Right** – Moves selected client carousel forward/back (page change)

The display system tree in the centre of the Control Centre dialog shows a typical display system structure. This is either the configuration as defined within the system configuration file, or, for the system detected by Midas Server during run-time network interrogation.

Clicking a display icon in this network will cause the system to attempt access, and display the contents of the remote screen in the viewer window on the right.



In addition to viewing the contents of the screen in real-time (snap-shot), it is also possible to select up to four cameras connected to the remote PC.

See Tutorial 5 for more details on networking and constructing the remote control interface. This dialog is often specially configured for each application, as such, please refer to the project documentation provided or contact technical support for further information.

Figure II - Master Script Dialog

Details

The Master Script Dialog allows the creation and editing of automated display scripts. Scripts are used to control the presentation of pages, allowing you to configure the presentation of pages, their start and end times, dates and duration. The global parameters are stored in a 'master script' file that is configured using the Master Script dialog box (shown left below), while individual page settings can be edited using the Display Script Dialog box (shown right below) and are stored in the 'carousel script' file. The master script may reference an unlimited number of carousel scripts, which may reference a single page for display, or any number.

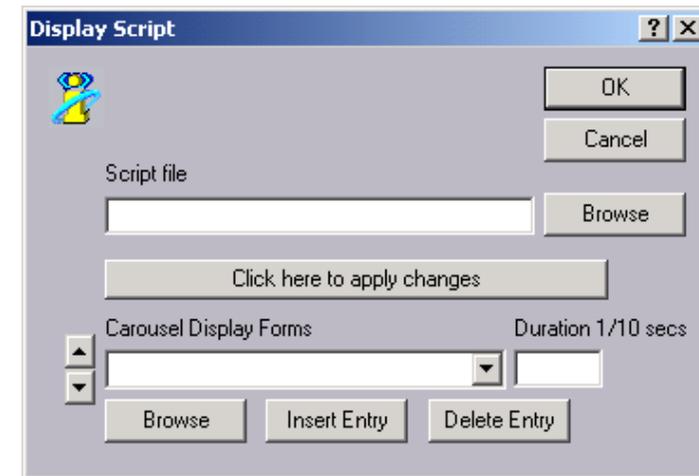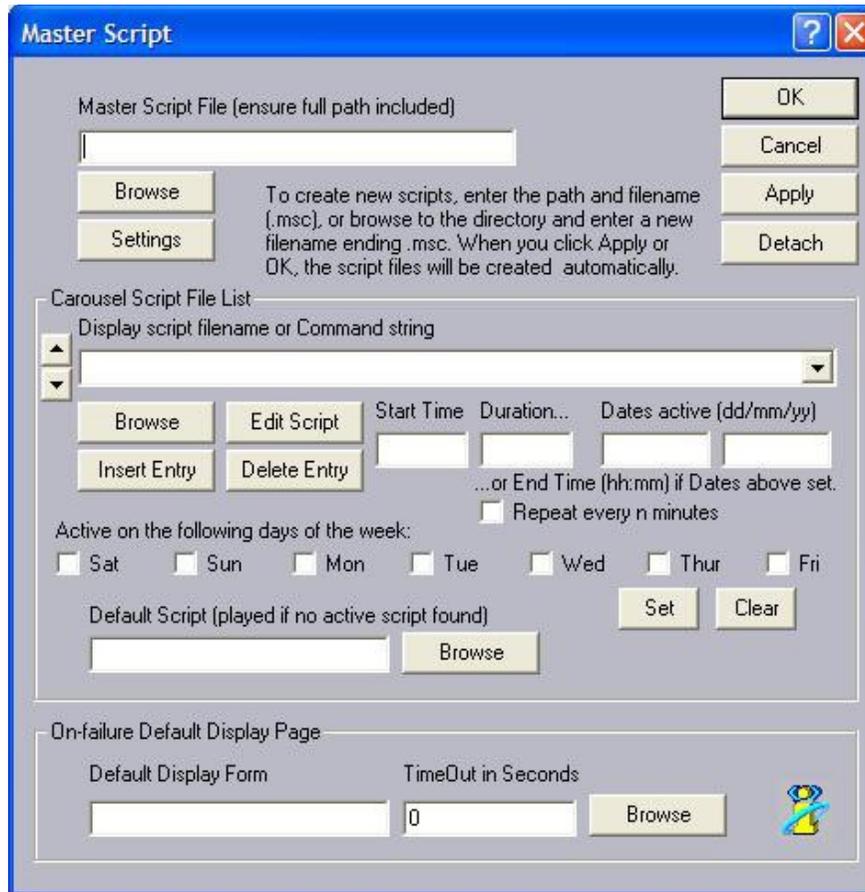

Access (Master Script) System Menu > Control Centre > Master Script Box

(Carousel Script) Master Script > Edit Script Box

Functions

- **Master Script** – Name a new master script or select an existing script
- **Carousel Script / Command** – Create / enter carousel script filename or enter a command for the master script to execute
- **Start Time** – Start time of selected entry
- **Duration** – Duration of selected entry
- **Date Active** – Starting date
- **Day Check Boxes** – Day specific activation
- **Default Script** – Script for automatic display if no others are active
- **On-Failure Default Display** – Script to be used in the case of system failure / communication loss

Presentation Creation Guide

Before starting the creation and editing of scripts, always create a start form for your script called, for example, “Start-myClient.dfm” (or any name you prefer), and then click the “Master lock all activity” toolbar button (the red pause button). This will ensure that once the script editing is completed, the presentation won’t be able to start changing pages before you’ve finished editing the script. On this page only, ensure that the “Disable Script Saving” icon is inactive – you need to click it, i.e. not pushed-in, otherwise the page won’t be attached to the script; this icon is next to the standard Save icon button on the top toolbar. This icon basically ensures that the script file is loaded whenever this page is loaded provided the button is not active; all other pages in the presentation should have this button active, pushed-in, or any script referenced on that page will be loaded, starting a new presentation.

So with the master pause engaged, click the “Edit Script” icon, the clock-fac, to display the Master Script dialog. Click the Browse button below the “Master Script File” edit box, and browse to the folder in which you would like to save your master script file, and then enter the filename manually, then click the Select button. Next, click the Browse button below the “Display script filename..” edit box, and repeat the same procedure as above, again entering the name for the file manually as it does not yet exist (you can also select an existing script file if you require). For new scripts this ensures the correct path to the new file is recorded. Again, click the Select button to finish.

Now click the Edit Script button, which is to the right of the same Browse button. MVP then displays the Display Script dialog. Then click the other Browse button below the “Carousel Display Forms” drop-down box. Now select the first display form file (“.dfm”) that will begin your presentation; note: only the “My Presentation Start.dfm” form will be “attached” to the script files, causing them to be loaded by ViewPoint. In the Duration edit box enter the time required for display of that page in 1/10ths of a second. Remember, if your page contains a video or audio clip, you can set the duration to a few seconds (>30) and later enable the “Lock page-change on video” feature in the “Global Display Settings” tab of the Display properties dialog. Note: Entering a duration of “-1” causes the page to stop until the user intervenes by click the next-page button.

Next, click the down arrow button to the left of the “Carousel Display Forms” drop-down control. This selects the next position ready for entry of your next page selection, if there is one. Again, browse to select the display form for next page to be shown in this script, then enter the duration again. Repeat this process until you have entered all of the display pages that you require to be displayed.

This script will apply until another script is read from a display form (which has the disable script button inactive) or it is manually or remotely stopped.

Note: The ‘Disable Script Saving’ (Main toolbar) function must be inactive for the page to be saved with reference to the script.

Presentation Creation Guide - continued

In overview, the master script contains a list of carousel (slideshow presentation) script references that can be displayed at the required time, for the required duration, and on the days or dates required.


The carousel scripts simply contain a sequence of display forms to be displayed, and a duration time for each.

Using this structure it is simple to build complex schedules for content playback, running selected presentations during mornings, afternoons, specific times, even on specific events, such as the event of a fire alarm (this will be explained later), or on specific dates or date ranges.


Figure 12 – Operational Properties Dialog

Details

The Operational Properties dialog (below) is used to configure important system operational properties, data-transfer, and communication, etc.

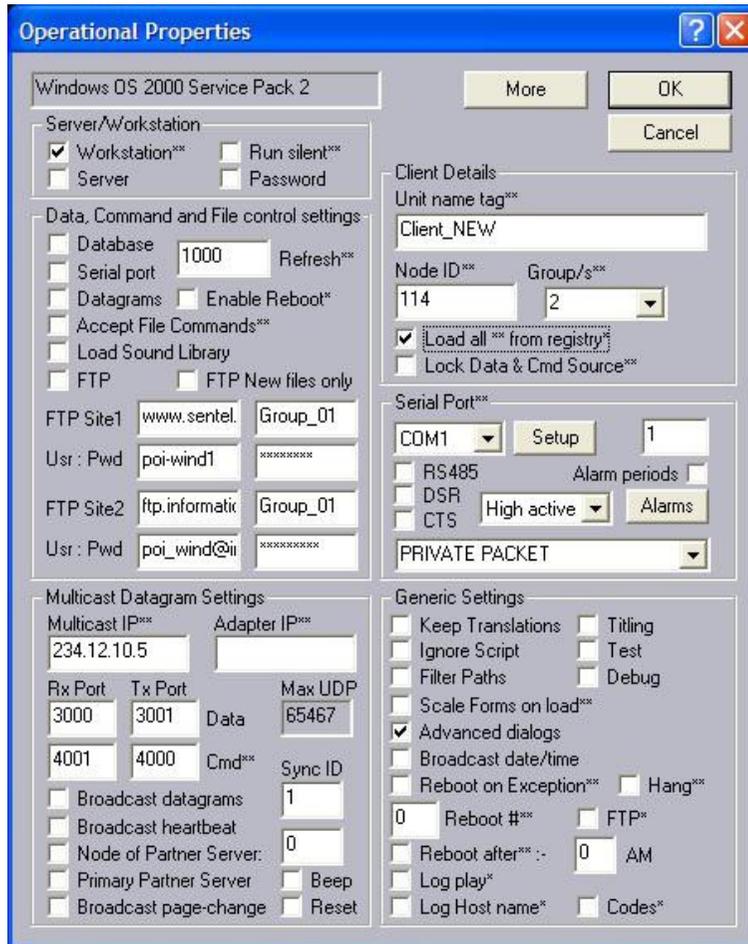

Access (Operational Properties) System Menu > Operational Settings
Functions

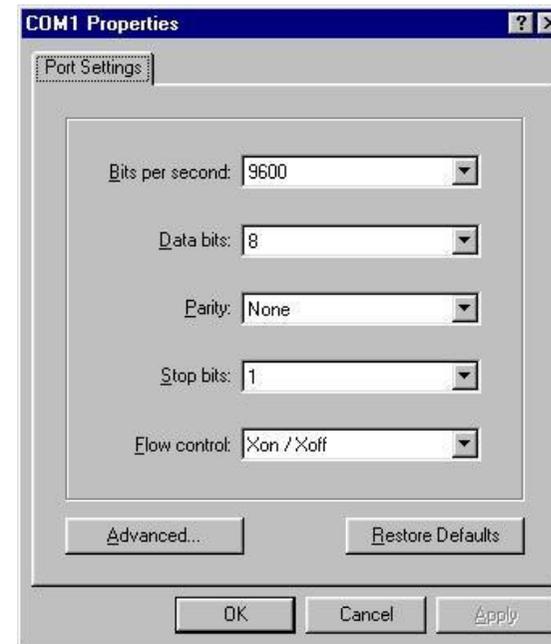

(Com Properties) Operational Settings > Setup

- **Workstation Mode** – In this mode, all warning messages are displayed
- **Server Mode** – In this mode, all warning messages are suppressed
- **Enable Password** – Enables Server password
- **Data Font** – Font used in data-view mode
- **Remote Display Mode** – Enable for operator-less embedded systems
- **Display Tag Name** – Name of client
- **Node ID** – Unique ID number for client
- **Groups** – Group listings for client
- **Load from Registry** – Enable load/update settings in system registry
- **Command and Data Source Connection** – Control Group
- **Database** – Uses the selected database as the data source
- **Datagrams** – Uses datagrams as the data source
- **Lock Cmd And Data Source** – locks current cmd/data settings when page changes
- **Data Refresh (ms)** – Refresh period for data updates to display objects
- **Serial port** – Uses the serial port as the data source
- **RS485** – Uses RS485 mode for the serial connection (interface required)
- **Input Protocol** – Drop down box to select protocol/input device mode (ANSI VT)
- **Multicast Datagram Settings** – Control Group
- **Broadcast Datagrams** – Enabled objects receiving data will rebroadcast
- **Broadcast Heartbeat** – Broadcast signal to other clients
- **Node of Partner Server** – Node ID of the Partner Server
- **Primary Partner Server** – Operate as the Primary Server
- **Multicast IP** – Multicast IP address
- **Rx/Tx Port** – Socket port number
- **Adapter IP** – Optional IP address for the required adapter (multiple adapters)
- **Sync ID** – ID of sync to transmit (Server/broadcast mode)
- **Generic Settings** – Control Group
- **Scale Forms on Load** – Corrects form resolution to clients physical screen
- **Advanced Dialogs** – Use multimedia dialogs for file browsing, etc.
- **Broadcast Date/Time** – Send datagram date/time packets
- **Reboot Count** – Enter the number of minutes to elapse before rebooting the system in the event of comms loss
- **Enable Titling** – Allows database headings to be customised (see Database Record Editor dialog description)
- **Reboot on Exception** – If the operating system, service or driver fails, reboots the client
- **Test** – Special test mode : configuration specific (information on request)

Serial Port Settings

The Com Properties dialog is displayed by click the Setup button shown at the right of the COM dropdown box on the Operational Properties dialog above.

Below the Setup button is an edit box that is used to set the delay time in msec to control full-duplex RS485 switching; 10ms seems to work well under all conditions.

The Port Settings dialog allows the usual settings to be made for the selected coms channel.

When RS485 duplex (2-wire) mode is enabled, the Flow control must be set to "None", as shown above.

Figure 13 & 14– Database Properties

Details

The Database Properties box allows linking to external data sources, local data-editor selection and data filtering.

Database Properties

Primary Database Source:

Data Table: Row Count:

Record Filter

String Equal Not equal And Or Or next

NONE

30 December 1899 >= Now

Date/time filter Object Filter > Spot*

Filter time-scope (secs) Logo <= Time*

< Date*

Pre-time Post-time Note: 30 Dec 1899 == date zero

Midas II Database Target Global time-scope

Pre-time

Select file Post-time

Note: Remember to enable the Data Source in Operational Setup!

Select Data Source

File Data Source Machine Data Source

Look in:

- dBASE Files (not sharable).dsn
- Excel Files (not sharable).dsn
- FoxPro Files (not sharable).dsn
- MS Access 97 Database (not sharable).dsn
- Text Files (not sharable).dsn

DSN Name:

Select the file data source that describes the driver that you wish to connect to. You can use any file data source that refers to an ODBC driver which is installed on your machine.

Functions – Data Source

The system can access local and remote databases using ODBC and OLE-DB. The client must have the required ODBC drives installed for the database required.

Initially, clear the database settings shown in the Database Properties dialog. Then enable database data source mode from the Operational Properties dialog. On clicking okay, the ODBC connection dialog should appear, as shown in the Data Source dialog.

Selection of the required database is a standard procedure that requires the relevant ODBC database drivers. Support for direct

Access (Properties) System menu > Database Settings

Functions – Database Properties

- **Primary Database Source** – Enables user to select the database
- **Data Table** – Name of table to access within the database
- **Editor Selector** – Selects the Generic or Transport Database editor configurations
- **Row Count** – Number of rows to retrieve
- **Midas II Database Target** – Supports text-based interfaces
- **Global Timescope (seconds)** – Global filter using current time as reference. Pre-filters all records with now +/- scope
- **Pre-Time** – Filter period (when records are valid) subtracted from current time
- **Post-Time** – Filter period (when records are valid) added to current time
- **Select File** – File used as source or target for Midas II data
- **Set Source** – Sets the selected file as the data source
- **Set Target** – Sets the selected file as the target source

Functions - Database Properties Record Filter

- **String** – Enter string for comparison and Enter field for comparison
- **Equal** – Compare for equality
- **Not Equal** – Compare for inequality
- **And** – Make this comparison critical
- **Or** – Make this comparison or others
- **Or Next** – Enable AND this condition OR the next
- **Date/Time Input Boxes** – Date/time set (optional)
- **Date/Time Filter** – Compare records with time/date setting (ignores string)
- **Object Filter** – Fetch string from specified object (string box) for comparison
- **Logo** – Uses characters from selected field for filtering (ignores string)
- **Filter Time Scope (Pre-time, Post-time)** – Filter Period (valid records) subtracted/added to current time
- **>=** – Compare greater than or equal (uses time scope)
- **>** – Compare greater than
- **<=** – Compare less than or equal
- **<** – Compare less than
- **Now** – Compare with current date/time (uses time scope)
- **Spot** – Use last two date/time entries for comparison
- **Time** – Compare records with just time setting
- **Date** – Compare records with just date setting
- **Log** – Log this field's date/time for next spot compare

Note: After a database has been selected, MVP must be set into Database mode in the Operational Properties dialog box.

If the database is not being displayed or an error message appears stating that the 'Jet access' file is inaccessible then the database may be locked. This normally occurs when a database is copied from a CD ROM, as databases contain both read and write properties that a CD file does not. To fix this problem, enter the properties of the database (right click the file icon) and turn off the 'Read Only' setting.

Database Guide

Databases hold tables of records and provide efficient processing, storage and retrieval of data. Almost any number of MVP clients can access and display data from tables within a database. You can either create your own database using other software such as Oracle or Access, or create copies of the default MVP database 'Data1.mdb', which is an empty default database with a single table, named "Table1". As standard, MVP uses a preset generic format for this table. This table can be considered a data "transfer table", and as such, its structure is not important. You must not rename any columns within this table.

The transfer table is used as the interface between the user's application database and the MVP clients. For example, an airport stores information in the airport operational database's tables (aodb), queries are created for selected tables that transfer the relevant information to the MVP transfer table. The transfer table, or as many of them as is required, is then accessed by the MVP server form, which transmits the tables content over the network at the selected refresh rate.

The transfer table consists of 30 columns each with a unique name. As shown in the 'Private Packet Protocol' section, each column can contain 1000 records. The first column, 'Tag', holds the identity of a specific record, 'Date' and 'Actual Time' columns must contain numerical values in their proper format (i.e. date- 00/00/00, time- 00:00:00). A fourth column, 'Sec Time', can be used (optional) for a secondary time record. All other records are entered into the 'Field' columns, and are text strings.

To enable the database connection, click the 'Database' check box in the Operational Settings dialog box. The 'Object Data Link' box in the Display Object Editor is used to reference objects to the database table or datagram transmit packet. The 'Tag' column holds entries from reference 1000 - 1999, 'Date' holds entries 2000 - 2999, 'Time' holds 3000 - 3999 and so on. If only 14 rows are being used in the display, then the first 14 entries (n000 - n013) of each field are needed (where 'n' is the row reference). All data entries will reside from field 5 to 26 (Tag, Date, Time, Sec Time take up the first four), so the first display object of the first column should have '5000' in the 'Object Data Link' box. The data specific to that link will now appear in the selected object using that object's current text settings. When the information in the database has been altered, Viewpoint will update the object display.


Note also that the database examples supplied with MVP, including the "empty" database 'Data1.mdb' are sorted by the Record Tag. Any additional records will be placed by order of the first letter of the Record Tag. Databases can also be ordered by other variables, such as the date they were entered. Data sorting and organisation can be accomplished via external database editing software or MVP's filtering.

Note: If you are unable to connect to a database and MVP is not giving you any messages, ensure that MVP is in 'Workstation mode' (Global Operational Properties dialog). However, turn this function off when the form has been completed to ensure that when an error occurs, the warning message will not freeze the display.

If the current form is to receive database information from a network, not from the local drive, make sure your network is setup accordingly (refer to pages 70 and 71 for information on setting MVP's network properties) and click the 'Datagrams' check-box instead of 'Database' in the Operational Properties dialog. If you are using the form to send information, link the form to a local database and select the 'Broadcast Datagrams' check box.

Figure 15 Record Filter

The Record Filter group of the Database Properties dialog box enables simple or complex filtering of database records locally, off-loading processing from the server. This approach allows a truly distributed processing model, which is efficient, fault-tolerant and simple to configure.

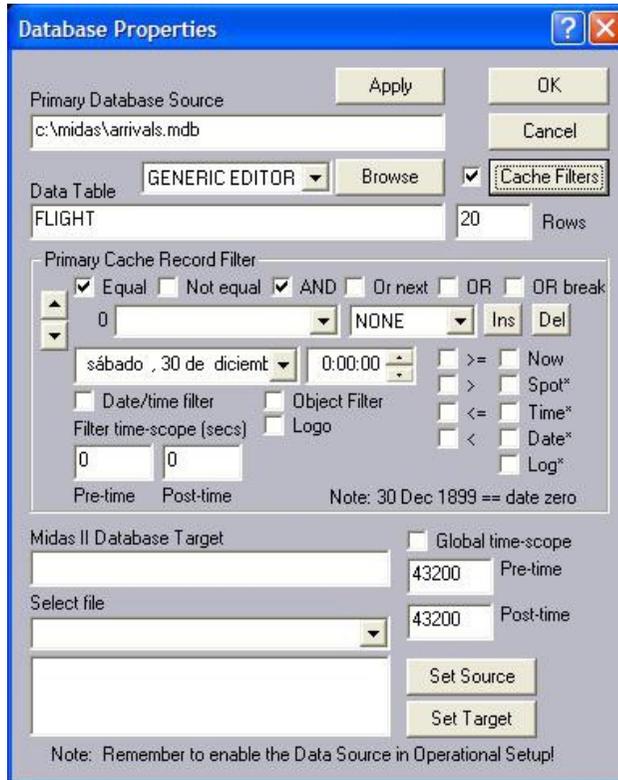

Using filtering, the system can be set to include or exclude selected records. You filter using references to specific fields, such as, for example, a time field compared against the current time or a specific time, or a string value compared to equal, not equal, be greater or less than a specified string. These are just some of the comparisons that are possible, and can be combined into multiple comparisons using Boolean logic AND or OR functions. If you are unfamiliar with such systems, the examples that follow will quickly allow you to develop a comprehensive understanding.

If, for example, a flight timetable display required only a specific airline to be shown at only a specific time, MVP's record filter can dismiss the records associated all other airlines by comparing the records with an input string, which is entered into the 'Input String' text box in the Database Properties box. This string is dependent on the type of filtering required (object, record or time). In this case 'Logo' filtering is used, which takes the first few characters of a record for comparison. If the airline is BA, MVP can reference the first few characters from a field in the BA record (the field that identifies the record as British Airways e.g 'BA'). The characters 'BA' must be entered into the 'Input String' box, and the field that contains those characters selected in the drop down menu to the right of the text box. Be aware that the 'Logo Tag Length' in the Display Properties dialog must be set to the amount of characters you want the filter to recognise (2 or 3). The 'Equal' and 'Not Equal' check boxes tell the filter to display or ignore records matching the input string.

The Boolean logic check boxes (AND, OR, OR NEXT) allow multiple combinations of variables to be filtered. You can insert multiple filter input

strings, together with their relevant fields, and specifically select exactly what records are displayed and when by use of the Boolean controls (these compare the current input string with the next one in the list).

A record can be displayed at a specific date/time for a set duration by comparing a time/date field with another, against a specified time or against the current time. Click the 'Time/Date' Filter check box and use the field selection pull-down menu (to the right of the Input String box) to reference a time or date field from the record and select the relevant 'Time' or 'Date' check boxes to allow time/date values to be compared with other time/dates in the record. Use the Boolean controls and the 'Less'/'Less&='/'Greater'/'Greater&=' arrowed check boxes to specify exact timing of the record display.

The 'Log' function retrieves time/date information from a record and stores them to be compared to either a specified time/date in the text boxes (below the 'Input String' box) or against the current time. You must have two previous logged entries (one for date and one for time if there are two separate fields in the record) and 'Spot' enabled. To compare with current time the 'Now' check box must be enabled in the same entry.

Figure 16 & 17 – Database Record Editor

Details

The Editor dialogs are used to facilitate the entry and modification of database information. Editor dialogs can be supplied for a range of applications, including stock markets values and currency rates. There are two default editor set-ups, the 'Transport Editor' (right box) for transport (air, rail, etc.) timetables and information. The 'Generic Editor', (left) is used for all other types of databases. The Database Editor box in the Database Properties Dialog box allows switching between the two.

Access Edit Menu > Edit Record

Functions – Generic Editor

- **Field 1 (Record Tag)** – Name of record (compulsory)
- **Field 2 (Date)** – Record date (compulsory) – automatically generated by MVP editor
- **Field 3 (Time)** – Record time (compulsory)
- **Field 4 (Secondary Time)** – Alternate time (optional)
- **Field 5 > Field 30** – Data Input
- **New/Delete Record** – Insert / remove current data

All displayed information from the linked database table can be edited and updated. All field names in the Generic Record Editor are fully customisable by selecting the 'Enable Titling' check box at the bottom of the Operational Properties Dialog box before clicking to left of the relevant text field in the Generic Record Editor. To blank a field name, you must enter a space. The customised field names are saved with the current Display Form. To blank a field name, you must enter a space. The customised field names are saved with the current Display Form.

Record Editor type and headings are saved to the display file. All other data is saved to the database file.

Functions – Transport Editor

- **Record ID** – ID number of database entry
- **Record** – ID of, for example, flight or train
- **Destination/s** – Destinations to be visited by transport
- **Disable Record** – Disables the current record
- **Public Remark** – Remarks used to advise passengers
- **Staff Remark** - Remarks used to advise staff
- **Status** – Status of transport
- **Reclaim/Check-in** – Baggage collection details
- **F14** – Free field / Command ID
- **F15** – Free field / Command message


Figure is a typical transport dialog as used by air and rail operators. By selecting 'Transport Editor' in the Database Properties Dialog Box, the database is configured to make data editing easier for transportation timetables.

Each destination and origin edit box has a matching code box. A default look-up file (city.cde) is supplied, which contains over 5,000 airports. Typing, for example, LGW into the matching code box, and pressing the tab key, automatically loads Gatwick into the the edit box. The city.cde file can be edited by to contain any entries.

Figure 18 – Translation Properties

Details

The Translation Properties dialog provides the user the facility to edit status / translation display messages. Properties such as colour and flash can also be configured. The Translator takes input strings from the database and can either interpret them another text string, image or flash file or look for a file that uses the input string characters.

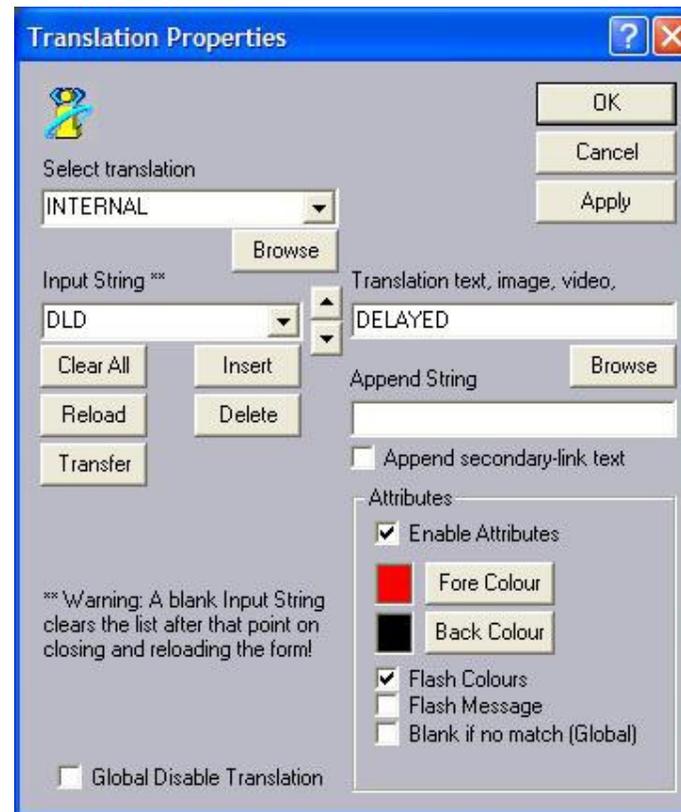

Access Edit Menu > Edit translations

Functions

- **Edit Input String** – The message/code received from the data source.
- **Edit Translation**– The message/code substituted for the input message.
- **Attributes** – The attributes used for the output translation
- **Flash Colours** – Flashes the colour of the output message between the new colour attribute and the object's static colour selection
- **Flash Message** – Flashes the output between the input text and output translations
- **Global Disable Translation** – Disables all translation objects

Translation / status codes (input string) can be repeated numerous times with different output translations. This allows a range of alternative substitute translations to be entered for one status code that are then selected using the Translation Settings section for each object in the Advanced Display Properties dialog box. Each status code has an index number relevant to its entry position. This index must be referred to in the Translation Settings for the appropriate translation.

This feature is designed to support, for example, multilingual systems, allowing the same status/message code received to be translated into any number of languages, depending on the objects translation index setting. Translations are studied in greater detail within the Tutorials section.

Logo-Linking

This feature enables bitmaps and Macromedia Flash files (.swf) with names that matches the first 'n' characters of entries in a database to be displayed. This is known as 'logo-linking', and requires the 'Logo' check box (Object Editor) to be on (plus 'Swf' if Flash is to be used), the 'Object Data Link' text box must contain the link to the relevant field, and the folder location of the bitmap or Flash file must be entered in the 'Text, CMD, Path...' text box as follows; '\Folder\etc\''. If you enter a folder path into the 'Forms Path' textbox in the 'Paths' dialog (Display Properties->More->Paths), MVP will refer to that folder when looking for the logo/Flash files.


MVP checks the first 'n' characters of database strings and uses files starting with those characters. To set the number of characters to use for file matching, enter the Display Properties->Global Display Settings dialog and alter the 'Logo-Link Tag Length'; bottom-right section.

Note: By clicking the 'Switching' checkbox in the Object Editor, the object will switch between displaying the logo-link file and the database string. The 'Forms Root Path' global folder location must be used in this instance as any text in the 'Text, CMD, Path...' box will override the database text string.

Figure 19 – Global Display Settings

Details

The Global Display settings offer overall control over the behaviour of the current Display Form, including inter-page transitions.

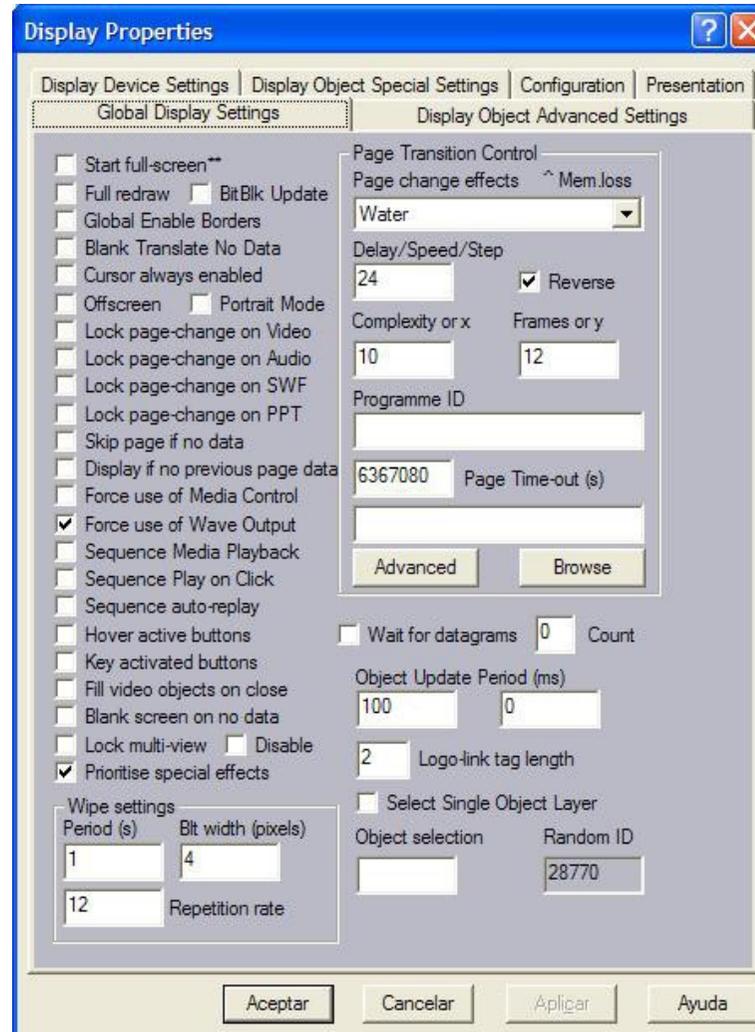

Access Edit Menu > Edit Advanced Layout > Global Display Settings


Functions

- **Full Screen Redraws** – Redraws entire display each refresh (use for testing only)
- **Bitblk Update** – Updates entire display backbuffer each refresh (testing only)
- **Global Enable Borders** – Draws a border around each object (testing only)
- **Blank Translate No Data**– Unused
- **Cursor Always Enabled** – Displays cursor on full screen mode
- **Portrait Mode** – Rotates displayed image for portrait displays
- **Lock Page-Change (Video/Audio/SWF)** – Keeps page open until media finishes, i.e. halts slideshow until playback ends00
- **Force use of Media Control** –
- **Force use of Wave Output** –
- **Sequence Media Playback** – Enables sequenced one-shot media playback
- **Sequence Play on Click** – Enables playback on mouse-click selection
- **Sequence Auto-Replay** –
- **Hover Active Buttons** – Button pop-up activation on cursor hover
- **Key Activated Buttons** – Keyboard activates assigned buttons
- **Object Update Period** – Time in ms between screen redraws (flash/ani. speed)
- **Wipe Period** – Time in seconds between wipe updates
- **Wipe Repetition Rate** – Time in ms between wipe steps (speed)
- **Wipe Bit Width** – Width of each update step (1 is smooth, 4 is coarse)
- **Programme ID** – ID of transition set up
- **Page Change Effects** – Default update effect used to display the current page
- **Delay/Speed/Step** – Effect dependent attribute (see effect)
- **Reverse** – Change direction of animation
- **Complexity** – Effect dependent attribute
- **Frames** – The number of frames used to complete the effect
- **Fill Video Objects on Close** – Paints the video object using the flash color
- **Page Time-Out(s)** – Enter the time-out in seconds before auto-page-change
- **Page Time-Out(s) Text box** – Enter destination dfm after time-out
- **Logo Link Tag Length** – The no. of characters to use from the record's ID
- **Select Single Object Layer** – Unused
- **Object Selection** – Unused
- **Home Form** – Location of 'Home' (initial) form. Press 'Alt+Home' on full screen displays to return 'home'. Press 'Shift+Home' to set current page as 'home' (without opening this dialog box)

Figure 20 – Display Device Settings

Details

All generic display settings can be set from this dialog. Both monitor display and video / audio I/O can be setup via additional dialogs (Properties 1&2 and Audio). Note: an object must be video-enabled to support external video I/O – see Advanced dialog).

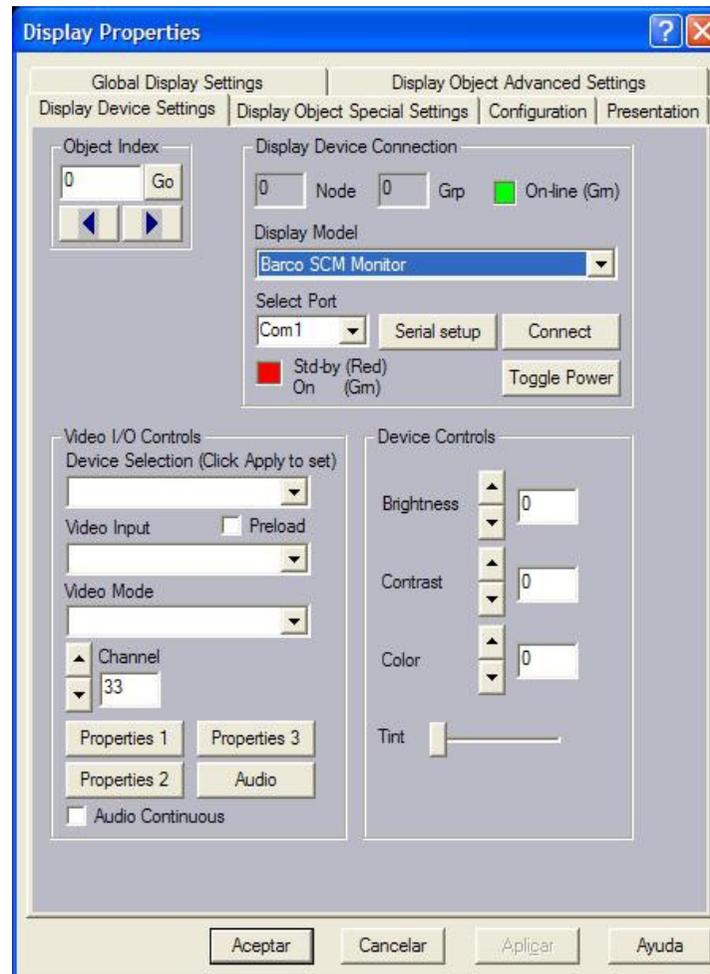

Access System Menu > Display Settings > Display Device Settings

Functions

- **Select Display Device** – Used to select the type of display device
- **Select Port** – Select the com port used to connect to the client machine
- **Serial Setup** – Used to setup the serial interface to the display device
- **Connect** – Used to initiate communication with the display device's internal micro (if available)
- **On-line (Grn)** – Indicator: Green indicates display device is on-line
- **Power** – Used to control display device power (if available)
- **Std-by** – Used to place the attached display device into stand-by mode
- **Video Input** – Used to select the input device
- **Preload** – Keeps the video service running between form loading (Note: only one video object may be used per form)
- **Video Standard** – Select the video I/O standard (PAL, NTSC, etc.)
- **Properties 1&2** – Specific to video I/O hardware
- **Audio** – Specific to audio hardware
- **Audio Continuous** – Streams audio from video I/O hardware in background
- **Channel** – Select the channel for the TV/Cable tuner
- **Brightness / Contrast** – Used to adjust contrast / brightness
- **Color / Tint** – Used to adjust the color / tint of PAL video

Important note – PAL/S-VHS monitor output precaution

Depending on the video configuration, an ePC or PC may not output to a PAL/S-VHS monitor unless it is connected to the monitor load before switch-on. Connect the 75-ohm monitor load and reboot. The ePC is set to PAL mode as default. This can be changed by accessing the Display Properties dialog (Screwdriver over cyan screen toolbar button).


The ePC-V system uses an advanced digital comb filter to improve colour artifacts. For best results, use SVHS instead of composite PAL.

The ePC is configured to be ready to run using Com1 port at 9600,n,8,1,p. It will process a subset of the IVC401 commands.

Figure 2I – Configuration Dialog

Details

The Multi-View Mode allows Viewpoint to run multiple Display Forms on the same screen at a lower resolution or across up to four monitors at the correct resolution. It is also possible to run one display form over all four screens, supporting quad-screen video walls. User interaction (mouse movement) and effects can run from one screen to the next as though your operation was on a single screen (virtual desktop).

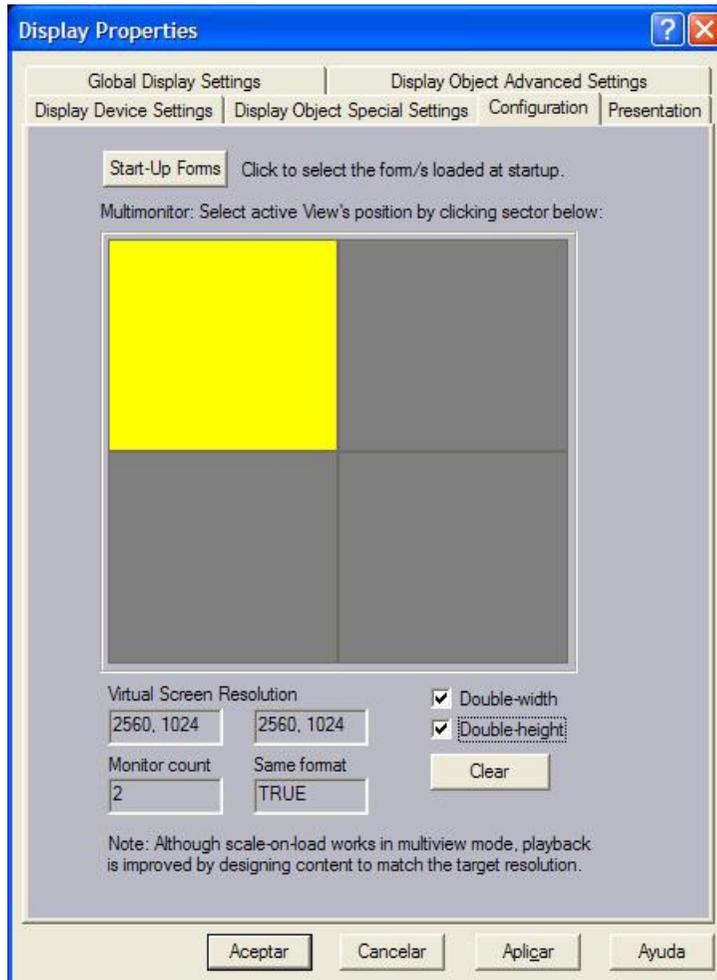

Functions

- **Form Position:** The grid defines the position of the current Display Form in the layout.
- **None:** Multi-view disabled
- **Double-Width:** Virtual desktop is across two horizontally mounted monitors
- **Double-Height:** Virtual desktop is across two vertically mounted monitors

Access System Menu > Display Settings > Multi-View Properties

Figure 22 – Presentation Properties Dialog

Details

The Presentation Properties dialog is used to select the presentation file for display. The entries shown below include the name of the presentation file, the timing in seconds for each page, or if 0 is entered, timing runs from the presentation's own settings, and a maximum time value for the presentation in minutes, to ensure that presentations can't lock-up the display. **Note:** Presentations are currently only displayed when in full-screen mode.

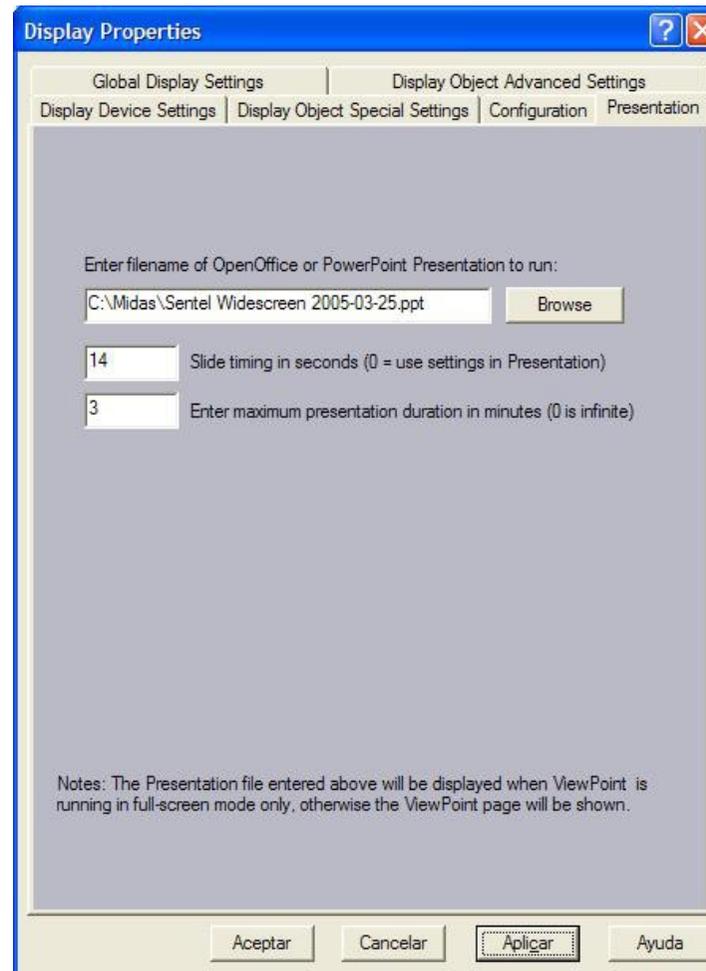


Figure 23 – Sound System Properties Dialog

Details

The Sound System Properties dialog is used for reviewing sound files/audio tracks. Announcements can be linked to events, database changes, etc. The file “Sound.dat” contains the sound file configuration, and example of which is provided for reference in the My Documents/MVP Forms directory.



Functions

- **Main Library** – Displays the audio files used
- **Alpha Library** – Displays the alpha (0-9, a – z) files
- **Sentence Library** – Displays the sentence library files
- **Arrow Down** – Copies file name from playlist to File Selection for manipulation
- **Play Selection** – Plays the selected audio file
- **Play all** – Plays all the files listed
- **File Selection** – Find sound file, edit file or record a new one using the generic audio editor (see dialog below)

The use of this system is application specific; further details are available on request.



Access System Menu > Sound Properties

Tutorial Section

Helping you use and understand Midas Viewpoint



Introduction

This section provides you with a step-by-step guide to creating a number of Display Forms that are provided on the MVP CDROM. The first example is themed for use in travel agents, using the fictional identity of "Worldwide Destinations". The demonstration consists of three pages of increasing complexity and will be explored in turn.

After completing the first example project you will be able to understand the "Ancona" airport information display, which is an advanced form of the final display in the first example involving more complex features. The final tutorial runs through the basics of configuring a network of machines and looks at the construction of the "Control Centre" remote control display. These forms are also provided on the ePC / CD ROM.

The Display Forms that we will produce consist of a static advertisement, a scrolling currency information page and a page that incorporates the previous two pages with additional graphics, animation and video playback. The currency information will be linked to an external database, which controls on-screen object content, in this case, currency rates.

Finally, all three pages will be placed in the 'Carousel' and scripted for automatic sequential display. The images on the right give you an idea of what we will be creating.

The display form files and all images can be found in the MVP Demo folder on the ePC / CDROM.



Tutorial I: Creating a Basic Display Form

Introduction

Creating a basic Display Form is an efficient process that is detailed in this first tutorial. Within a few minutes, you will be able to create and edit objects, text and understand the basic elements of producing a display. By the end of this first tutorial, you should be successful in recreating the “Worldwide Destinations” advertisement display form, entitled ‘WorldwidePoster.dfm’ on the CD ROM.

Step 1: Initial Set-up of the Display

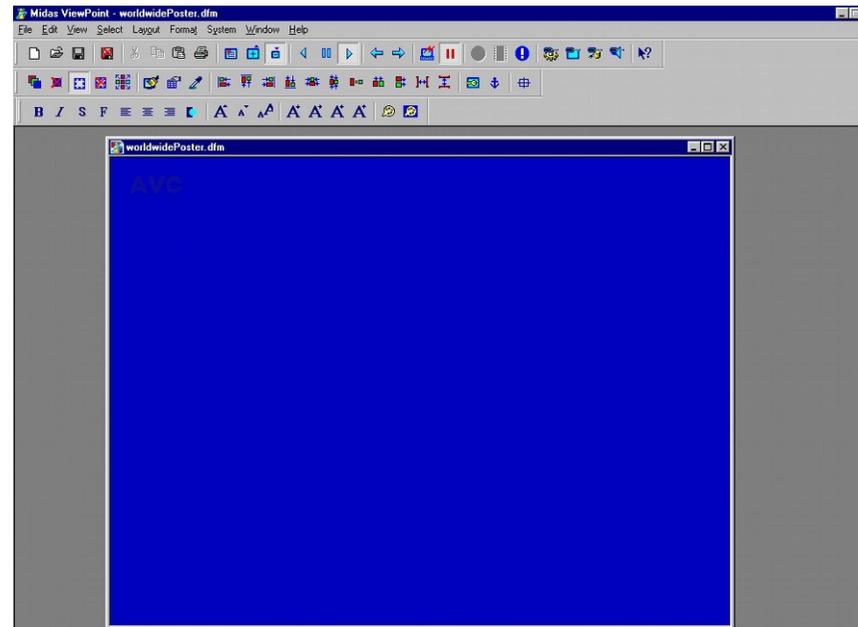


Fig 15 – The display form size determined by the background object

For this tutorial we will be using a display resolution of 800 x 600. Object 0 is the background and sets the size of the display form. Adjust the dX (height) and dY (width) values of object 0 in the Display Object Editor. Although Viewpoint is capable of running displays at any resolution your monitor uses, we recommend that 800 x 600 is used (or similar) to maintain running speed of the display, the effects and using / creating files of a relatively small size.

Changing your monitor resolution to that of the form allows you to view the Display Form at full screen and in the correct proportion. Use the short-cut of pressing the Escape Key or ‘Toggle View Mode’ Icon in the toolbox to change to full screen mode.

Note: If you intend to transfer your work to another hard-drive, enable 'Filter Paths' in the Operational Settings dialog box, save the Display Form and re-open it. This function, when a form is loaded with the filter feature enabled, deletes all reference to the host drive in the path settings, so each linked file (image, script, database, etc.) will be remembered in relation to the drive in which the application was installed. This means that you won't have to manually retype all the file references when your work is transferred to another system.

Step 2: Viewing the entire display

Use the 'Scale View To Fit Window' function in the top row of the toolbox to view the entire background in proportion within the display window.

Note: If you are designing a Display Form which is not intended for the machine you are working on make sure that the 'Scale Forms on Load' option in the 'Operational Settings' dialog box is off when opening or saving a form, or all objects will be scaled to fit the current monitor resolution. If you save with this feature on and the display looks deformed, select all objects in the Edit Menu then hold Shift + Control and click on the 'Make Selected Objects the Same Size' icon in the second row of the tool box. If you are not in 'Scaled to Fit Window' mode then you will be able to type in the values for the new resolution (800 x 600).



Step 3: Applying Objects

Fig 16 – Text Objects Placed on Image Object

Create a new object and resize it to that of the background object (0) using dX, dY value boxes in the Display Object Editor. This new object has a higher index number (1) than the background (0) so will be placed 'above' it (has visual precedence) in the display. Think of the object index as 'layers', the lower the number, the farther into the Z axis (distance). Click on the browse button under the 'Media' text box. This allows certain file formats to be attached to the object (when attaching images use standard, uncompressed Windows bitmaps for faster loading). Find 'Sky.bmp' in the 'Worldwide' folder and close the object editor. The image has a resolution of 800 x 600 so will fit perfectly onto your object.

Step 4: Creating and Editing Text

Create three new objects for the text. Text can be entered by either moving the cursor over the object and typing or opening up the Display Object Editor and typing the text into the 'Text, Path...' box above the 'button' check box. The text is position on separate objects for flexibility. The font used in all the Display Forms is 'Arial' bold, adjustable in the Display Editor. Use the tools in the third row of the toolbox to adjust properties such as font size, boldness and drop-shadows. You can "dynamically" adjust text size with an while resizing an object by clicking on the 'custom text size' toolbar icon (see text toolbar description), holding the 'Control' key and dragging the corner of the object using the left mouse button.

Step 5: Creating Transparencies



Fig 17 – Completed Advertisement Display

Use the 'Overlay' function (bottom row of the tool box) to change the object background color to transparent. Viewpoint dismisses the original color of a non-graphics filled object, allowing objects underneath to be visible.

Graphics objects can also incorporate this function by matching the color that is required to be invisible with the background color and the "Transparent Color-Keyed Object" check box enabled in the Display Object Advanced Settings dialog box. You can also 'Alpha-Blend' the object for subtle variations of total object transparency. The line in the advertisement display is a very thin object with a white background.

Once the page has been designed in a similar manner to the example, save the form giving it your own unique name. If you do not save it in the same folder as the files linked to and from the form, make sure all the paths are correct.

Tutorial 2: Creating a Database Display

Introduction

This tutorial explains the process of producing a page containing scrolling information that would otherwise not fit on the display. The information will be linked to a database and updated automatically. For this exercise, we will recreate the “Worldwide Destinations” currency exchange page ‘WorldwideData.dfm’. This page has a display showing the conversion rate of currencies from 14 countries with images of their national flags.

Step 1: Creating the scrolling object

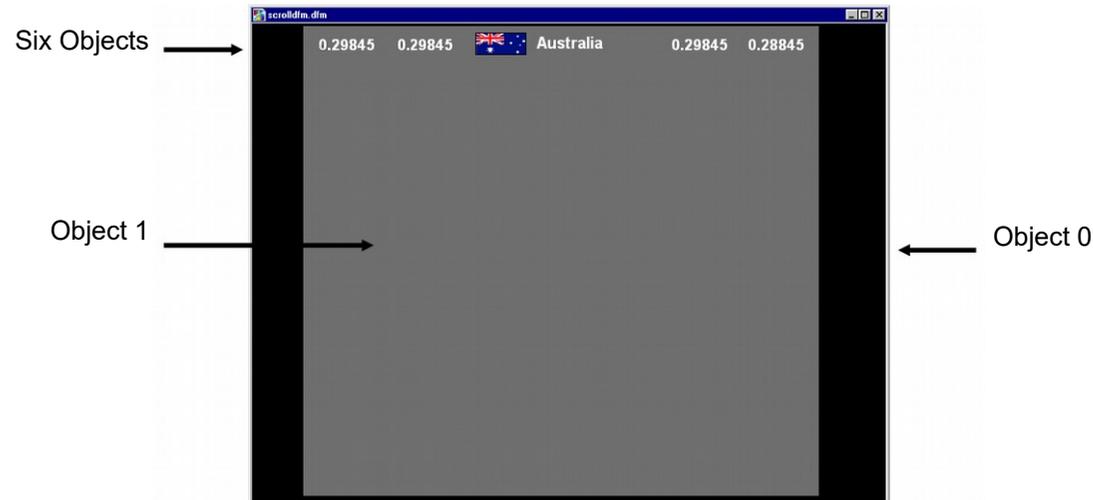


Fig 18 – A single line of data objects on the scrolling object

To start, create a new Display Form and edit the background (object 0) color to black in the Object Editor, to make the next steps clearer.

Basically, all scrolling objects on-screen are linked to a single off-screen object, the “source”, which defines the position and size of the off-screen area that usually contains the images from many other objects. We’re going to create all the off-screen objects actually “on-screen” to start so that we can edit and manipulate them, and then finally change them to offscreen objects that draw in the source object’s area. The off-screen source object is usually large, and the objects that will comprise the currency lines of this sample will all have their “Drawing Target” set to that object; so basically a large number of small objects will all draw themselves in the area of the off-screen object, creating the complex source image for the scrolling display.

Creating the scrolling object

ViewPoint forms can be any size, smaller or larger than the physical size of the actual screen of the PC. ViewPoint will scale the screen to fill the physical screen of the monitor, and its very easy to scale forms to any monitor resolution.

For this example, we need a form with a vertical height of at least 800 pixels so we can place all the objects that make-up the screen, so object 0, the background of the form, needs to be set to dXY (delta X and Y) of at least 900 x 800 or greater; which we will correct this later after editing.

So, using the object editor, expand the size of your background object (0) to 900 pixels in height, and then create a new object that will become the scrolling object showing the lines of currencies and images. The scrolling object is shown as the large grey object in the diagram shown in Fig. 18 above, covering most of the black background. This object should have an index number of 1 as it's the first object you created (which is drawn on top of the background object), and must be wide enough to contain a single line of the currency objects we'll shortly create, so make it 842 pixels across and the same height as object 0, i.e. 900 pixels.

Step 2: Construct a single line of objects

This display form will consist of objects that display the country-name and national flag for 14 countries, plus the currency details, "cash buy / sell and traveller's cheques buy / sell" for each currency line. As each currency has these common elements, it is best to construct a single horizontal line of database-linked objects for the first country-currency, and then replicate this to create lines for the 13 other countries.

To start, create a new object by clicking the "New display object" icon on the Edit toolbar, double-click the object to show the Object editor dialog, and then set it's size to 100 x 34 pixels in the dXY entries. Position this object at the top-left corner of object 1, but 30 pixels from the left edge. Set the "Links" edit box in the "Object Data Settings" group to 6000, which is the first data-item from the database table of the 6th column. This will be discussed in more detail below.

Ensure all objects are deselected, "Select/None" from the main menu, double click the new object to access the object editor, and then click on the Replicate button. After the "Object Replicator" dialog box has displayed, select the 'Replicate Right' check box, setting "Number of Copies" to 5, and the "Inter-object gap" to 20 pixels. This will give you a line of equally sized, equally spread objects. Set "Data Link increment" to 1000, which will set each object to the next column in the data table.

The third object from the left (object 4) will house the flag image, so it needs to be the same size as the bitmap to prevent scaling and maintain quality. Now change its width to 74 pixels using the Object Editor. You may also wish to move object 5, which will contain the country name, closer to the flag or make it wider to allow the name to be displayed with a larger font. If you misalign objects by manual movement, they can be corrected by right-clicking the object and dragging, or by using the alignment tools in the object toolbar.

Step 3: Connecting the display form to the Database

As the other 13 lines of the data objects are repetitions of the line you have just constructed, we linked the objects of this line with the database table prior to replication by setting the Link edit box of the first object. The Replicator incremented the database links, meaning that all the objects you created will automatically have the correct database links.

Now we will try to connect to the sample database: Open the database properties dialog box and select the 'Currencies.mdb' database from the 'Worldwide' folder, enter 'CURRENCIES' as the table name and 14 as the row count (one row for each Country).

As explained in the Database guide earlier in the manual, each object must be linked to the database using the correct database entry number. If you look at the Record Editor, you will see that the currency text start at the 6th Field through to the 9th. Each field can contain one thousand entries (one thousand records) of which we are using only 14. The entries start at n000, so the object data link value for the first object will be 6000, the second will be 7000 while the latter two objects will refer to 8000 and 9000 respectively. Enter these link values into the 'Object Data Link' box in the Object Editor for objects 2, 3, 6 and 7.

The database information can either be edited remotely using appropriate software such as MS Access or internally using Viewpoint's Record Editor. The Fig.8 shows the database record editor (our database uses its generic format). You will notice that the currency data in fields 6 to 9 as field 5 is allocated to the actual currency of the relevant country. This is purely for reference and has no effect on the display because there are no objects linked to field 5 (entries 5000 to 5999).

The two middle objects, however, do not contain currency values (Country flag and name). Instead, we will enter the Record Tag from the database that will be translated to text and image by MVP's translation feature.


Step 4: Data Link Translations

The translation feature allows received data to be automatically translated into another text string, or image/ animation file reference, with optional attribute changes, such as colors and flashing. In this example, the objects that will contain country names and flags do not display the text information directly from the database. Instead, the country name, for example "Australia", has been translated from the input string 'ALA' (input from the database), while the Australian flag image was named 'ALA.bmp' and 'logo-linked' to object 5. For more information on 'logo-linking', refer to the Translations Dialog explanation.

The translation facility is useful as it allows standard definitions for items, in this case country names and flags, to be translated into full-length text definitions and images. In the case of the text, it can be translated from simple codes, i.e. ASL, into the countries' local language names and images.

To start creating the translations needed, access the Edit Translations Dialog Box to define input and translation strings. 'ALA' from the database is entered into the 'Input String' text box and 'Australia' is entered into the 'Translation String' text box. Now every time MVP reads 'ALA' from the database it will display 'Australia' in an object linked to it if the object has the Translate check-box ticked in the "Display Objects Advanced Settings" dialog; click "More" in the object editor to access this dialog.

You must also enter this database field number in the 'Object Data Link' text box in the Object Editor box for object 4, as you would for a direct link to a database table entry. In the 'Currencies' database, 'ALA' is the 'Record Tag' which is field 1000. Now you must enable the object to display translations in the Display Object Advanced Settings dialog box under Translation Settings. See Tutorial 4 on multiple translations, including language translation.

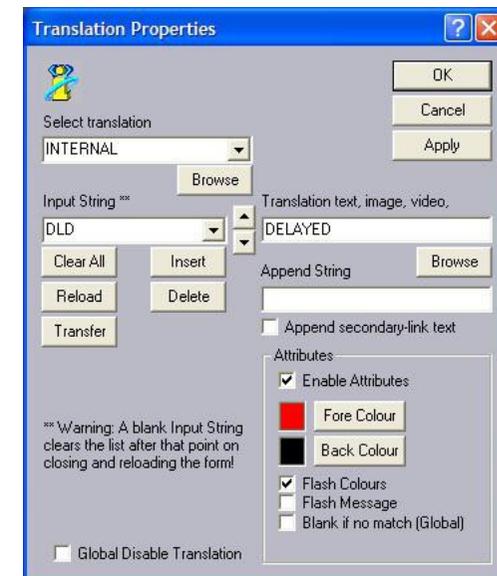

Step 5: 'Logo-Linking' Images to the database


Both Australia (object 4) and the Australian flag (object 5) will have '1000' in their Object Data Link boxes as they both refer to the database entry string 'ALA'.

To have the object display an image file using the text string from the data table link ('logo-linking'), open the object editor for object 5 and enter the folder location of the flag images ('MVP Demo\Worldwide Flags' on the hard drive) into the 'Text, Cmd, Path or...' edit box and click the 'Logo' check-box to 'Logo-Link' the image. If the flag image still does not appear, check that the 'Logo-link Tag Length' is set to 3 in the Global Display settings so that ViewPoint will look for files using all 3 of the first characters of the text received from the database.

Connecting the database selected: Now click the Database check-box in the Operational Properties dialog box, and click the 'Workstation' check-box activating the warning messages if any problems arise. Click the OK button, and then the "Edit Data" icon on the top toolbar should show a yellow '!' in a black circle. If you get a warning message or this doesn't happen, check all your database settings again and repeat.

Step 4: Replicating the Line of Objects

Fig 19 – Replicated Objects

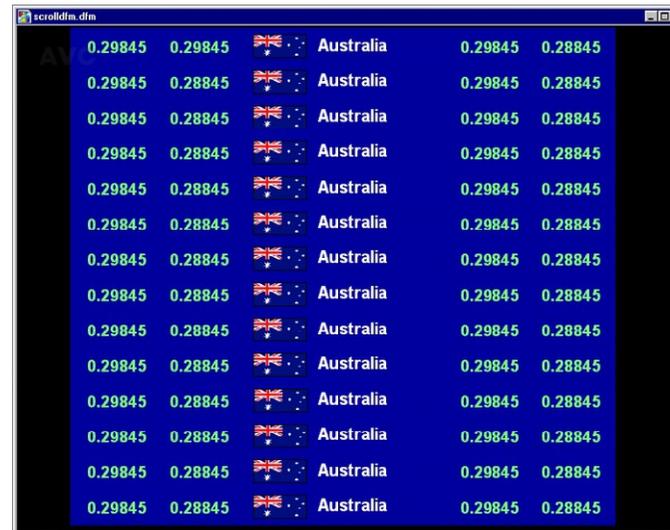

Use the 'Replicate Selected Objects' Icon in the Edit toolbar to duplicate the selected objects for a further 13 lines.

For this to work properly, deselect all object using Select/None from the file menu line. Click the "Enable Object Selection" Icon from the Edit toolbar, and then, holding down the Shift key, use the mouse to position the cursor over the first object in the line, click the left mouse button, and move the mouse, keeping the shift key and left button down, over the entire line of object, then release the keys. Click on the background of the display form if the edges of the form show selected, otherwise the background object, 0, will also be replicated!

Now click the Replicate icon, select “Replicate Down” and enter a gap of 30 pixels in the “Inter-object gap” edit box. Set the “Data Link Increment” to 1, this will add a value of ‘1’ to the database link for each object replicated, so each object will correspond to the next record in the database table, i.e the first object of the second row will have the link value of 6001, the third row a value of 6002, etc.

The Scrolling object (object no. 1 in this example), scrolls vertically showing the currencies for all the countries within a restricted vertical space. Scrolling is useful to show information that cannot physically fit into the area allowed on the screen. The scrolling object shows the image from an object that is usually set as “Offscreen”, and is usually a larger object; we will call this the Source object.

The Source object must be big enough to hold all 14 lines of the currencies; the current currency line objects will all be set off-screen shortly. Taking the dY value (height) of a row of objects (34 pixels) plus the inter-object gap (8 pixels) and multiply it by the amount of rows (14) will give you the exact vertical dimension of the scrolling object: 588 pixels.

Step 5: Attaching All Objects to the Scrolling Object

Once all the display elements are positioned correctly on-screen, they will need to be set to draw in the area of the scrolling-source object before they can be shown scrolling within the object that will act as a window to the source. To do this, first select all the display objects with the exception of the background (object 0) and the scrolling-source object (object 1). Open the Advanced Settings dialog box and enter the scrolling object number (1) into the ‘Drawing Target’ box. This function sets the selected objects to draw within the off-screen source object. Their X, Y co-ordinates are now in relation to the source object, not the background (0,0 is the top left corner of object number 1). We will refer to the scrolling object with all attached objects as the ‘scrolling region’.

Step 6: Defining the on-screen Scrolling Region using a new object

In the Display Object Editor, click New to create the ‘scrolling-window’ object (it should be object 86) and then alter it’s dimensions to the desired size (XY= 0, 90, dXY=842, 328), making sure that either it’s dX dimension is 842 pixels, matching that of the scrolling object (the Y dimension should match that of the scrolling object if it is required to scroll horizontally). Next, we need to link the window object to the scrolling object. To do this we must give the objects reference names, located in the Object Editor under ‘Object Data Settings’ and ‘Object Data Link’.

Step 7: Data Linking the Objects

The ‘Object Data Settings’ box allows entry of the object’s unique name. Call Object 86 ‘window’ and Object 1 ‘scroll’. The ‘Object Data Link’ box refers to where the information to change the current object is coming from. By typing ‘scroll’ in this box for object 86, it will obtain information from object 1 (the scrolling object plus all other objects targeted to it) to be displayed. All objects attached to and including the scrolling object (object 1) are now copied in the window.

Step 8: Animating Objects

Fig 20 – Completed Scrolling Region



Turn on the 'Off-Screen' option in the Display Object Editor to place all objects targeted to object 1 in the off-screen buffer. These objects can now only be seen within the scrolling window. To make the objects scroll click on the 'Animate' check box for object 86. Use the 'Vert(ical)' and 'Rev(erse)' boxes to determine the direction of the scroll. The properties for animation control can be found in the Advanced Display Properties Dialog Box, under the Animation / Scrolling Parameters section. The 'Period' text box refers to the time delay in animating (the smaller the Period number, the slower the animation), while the 'Jump' box refers to movement in pixels.

Step 9: Finishing the Design

Rates for other currencies available on request. Commission on currency transactions up to £50 will not exceed £3.00

Cash				Travellers Cheques	
We Buy	We Sell			We Buy	We Sell
0.40506	0.39506		Australia	0.40506	0.39506
0.04718	0.04618		Austria	0.04718	0.04618
0.01675	0.01575		Belgium	0.01675	0.01575
0.43279	0.42279		Canada	0.43279	0.42279
0.09890	0.09690		France	0.09890	0.09690
0.33488	0.32488		Germany	0.33488	0.32488
0.29845	0.28845		Holland	0.29845	0.28845

Commission Rate 1.5% Minimum Charge £1.50

Fig 21– Final Currency Display with Information from Database

Finally, adjust the vertical sizes of both the background object (back to 800 x 600) and the window object (around ¾ of the display). Once these have been adjusted, edit the background (object 0) color to blue using the RGB values of 88, 64, 176 (which will be necessary for the next display). Add the complimentary text featured on the form, one line of text per one object to make editing more flexible. The commission rate and minimum charge figures can also be linked to the database by using fields which come after the currency information (1015, 2015, 3015, etc.).


Tutorial 3: Creating a Multiple Function Display

Introduction

The third and final page contains the same scrolling objects, a video display and additional graphics. It is a combination of the two previous pages with added visual touches. The example file is called 'worldwideMulti.dfm'. In this section we will be adding all three Display forms to the carousel.

Step 1: Additional Graphical Elements

Fig 22 – Multiple Function Page

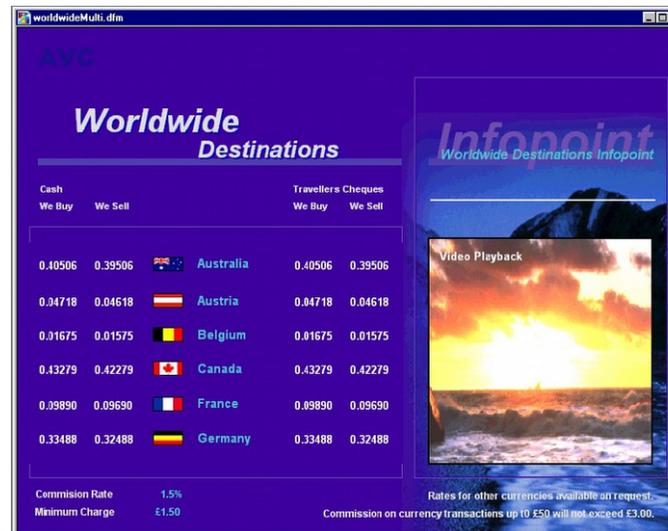

On this page, the scrolling region takes up considerably less space than the previous page. Use the 'Make Objects the Same Size' technique detailed in Tutorial 1 to decrease the size of the scrolling region, its objects and the text around it, then modify the size of the background (0) back up to 800 x 600.

All other elements on the page are either flat shaded objects or overlay objects with colored borders. The image in the background ('sea.bmp') can be found in the 'Worldwide' folder along with the images in the animated sequence which will be looked at later. For now, create an object of 266 X 266 to fill the space of the right hand image.

Don't forget to keep track of the numerical order of the objects as this affects their order in the Z axis (or 'layers' as they are placed on top of each other) which may result in some objects being hidden. It is possible to 'dig' through layered objects using the 'Underlying Object Access' tool located in the display object editor (yellow drill bit), you can use the shift key to reverse the direction when clicking the drill button.

You can also use the 'Object Locator' in the second toolbox row to identify hidden objects. Their number appears in the status bar at the bottom of the screen. The common elements of this page from the previous two pages can be copied and pasted from one form to the other.

Step 2: Linking a New Set of Flag Images

If we used the same flag bitmaps for this smaller display, they will be scaled by software and will look deformed. There is a set of smaller images in the 'Worldwide flags2' folder for use in this display, making the flags clearer. The folder location would have to be manually re-inserted into the 'Logo-Link Path' text box of every flag image object in the Display Object Editor. These smaller images will fill an object of 37 x 17 pixels, so the flag objects' sizes will need to be adjusted to prevent scaling.

Step 3: Scripting Multiple Pages in the Carousel

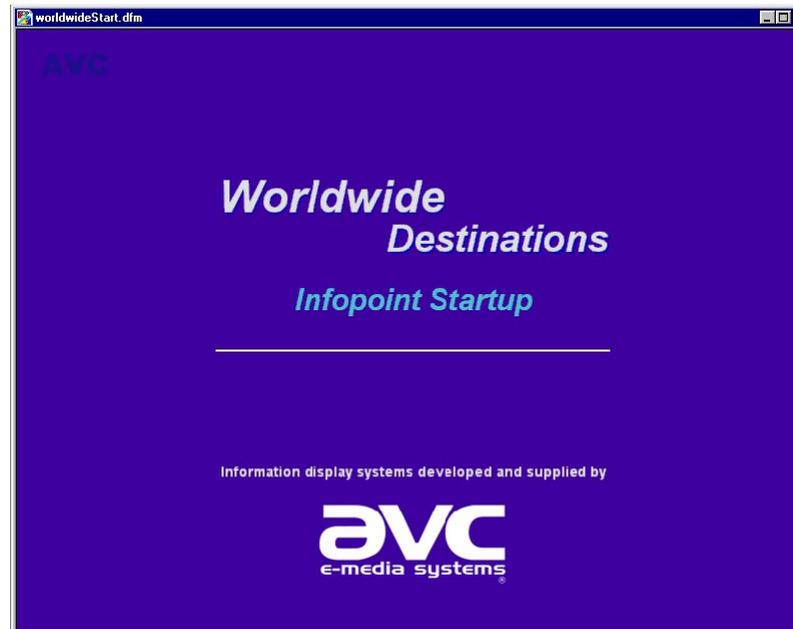


Fig 23 – Start-up screen containing Master Script

After each page has been completed, a 'script' must be created to contain multiple page location, order, operational date and time limit preferences. The linked status of the selected pages is known as the carousel.

When a page is in the carousel, it is controlled by the Master Script. It is recommended to create a 'Start-up' page containing the master script, with references to all other pages (bar the Start-up) contained within, rather than having a script for each individual page. This is, of course with the exception of user interactive displays coupled with automated sequences.

For further information on the construction of a master script, please refer to the **page 41**. The example of a start-up page is called 'worldStart.dfm' in the 'Worldwide' folder (diagram left). Don't forget to disable all screen activity (the red 'pause' icon, top row of the tool box), other wise the script is applied immediately and the start-up page may change before you have a chance to save.

Step 4: Adding Inter-Page Transitions

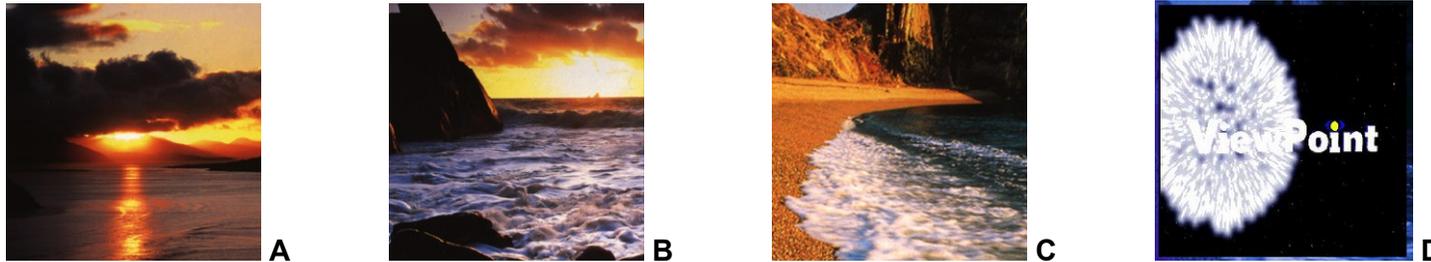


Fig. 24 – Blend ‘Wipe’ Transition Between Pages

Midas Viewpoint has a vast range of page-to-page transitions that give extra visual flair to presentations, and make displays more interesting and eye-catching. These powerful effects are accessed via the Global Display dialog box. However, DirectX 7.0 and DXMedia 7.0 or higher are required to support the 3D effects, without these some of the transitions are unusable. These are labelled as lower case in the 'Page Change Effects' pull-down menu.

The transition you save for a particular page comes into effect as the page loads. There are parameters for the effects that can be changed in this dialog box, such as the speed and quality of the transition.

Step 5: On-page animation and video



Viewpoint also allows sequenced animation and video playback, complete with transitions, to run on a single page. Images and movies are placed on top of one another with position and duration values set to each. The demo display contains a small window in which a sequence of three images (A, B, C) and a movie (D) rotate. Select the object that represents this window (created in step 1) and enter the object editor.

There are 3 numerical input windows to the right of the 'Calc' checkbox. These represent the unique sequence number (right), the time scale of the animation before looping (centre) and the objects position in the scale (left). You can define the time of the scale by entering the Display Properties dialog and entering a value (in milliseconds) in the 'Object Update Period' box or multiply it by use of the global 'Switch Period' box in the Advanced Object Editor. The scale of the sequence (in this instance, '70') is multiplied by that time value. The timing of an object appearing in the sequence depends on its position in the scale, e.g. 2 of 70 is at the beginning while 62 of 70 is close to the end of the loop. In the demo you will notice an additional object with no bitmap, placed just before the AVI (between C and D). This is included purely for a 'fade to black' effect after the third image. When inserting a video clip into an object, be sure to switch on the 'Close on Repeat Play' check box in the Advanced Object Display. This function prevents the video clip from looping and returns to the animated sequence.

It is also possible to use MVP's effects library for object transitions. Select the desired effect from the 'Display Effect' pull down box in the Object Editor dialog and enable the 'Animate' check box. The parameters for object transitions are located in the Advanced Object Editor. You must change the length of the 'Duration' as it has a default setting of '1' which means no transition will take place. Use the Rev(erse) and Vert(ical) options in the Object Editor to change the flow of the effect (if desirable).

Reminders about The Final Display

Once all pages and transitions have been completed satisfactorily then the whole display will commence upon the opening of the 'start-up' file. Be aware that the sequence will commence automatically and not hold on the start-up screen. As soon as the script is read, and the next page is located, the sequence will be started. Any external media files or data strings that are changed will be adjusted accordingly on the display the next time that page is opened (either manually or in sequence). When images / data cannot be found when opening a display, the object that would contain them will appear empty using its preset background color, if the 'Blank No Data' (Advanced Properties) is enabled.

Tutorial 4: The Ancona Display

Using the techniques learned from the previous tutorials, it should now be possible to produce a display with the complexity of the “Ancona” form found on the CD ROM. This display was created for use at Ancona Falconara airport, Italy, and consists of multiple scrolling regions and animations. The database display has several new features that were not included in the previous tutorials; translation for multiple languages, database controlled images and stepped animation.

How the screen is constructed

The Ancona display consists of eight information ‘panels’, each containing a row of database linked objects on top of bitmaps and a narrow scrolling region. To the left of these panels lies a corresponding set of indicator ‘light bulbs’. Above them is a partition containing information about the database layout. The diagram below shows how the panels and scrolling regions are constructed and positioned on the display.

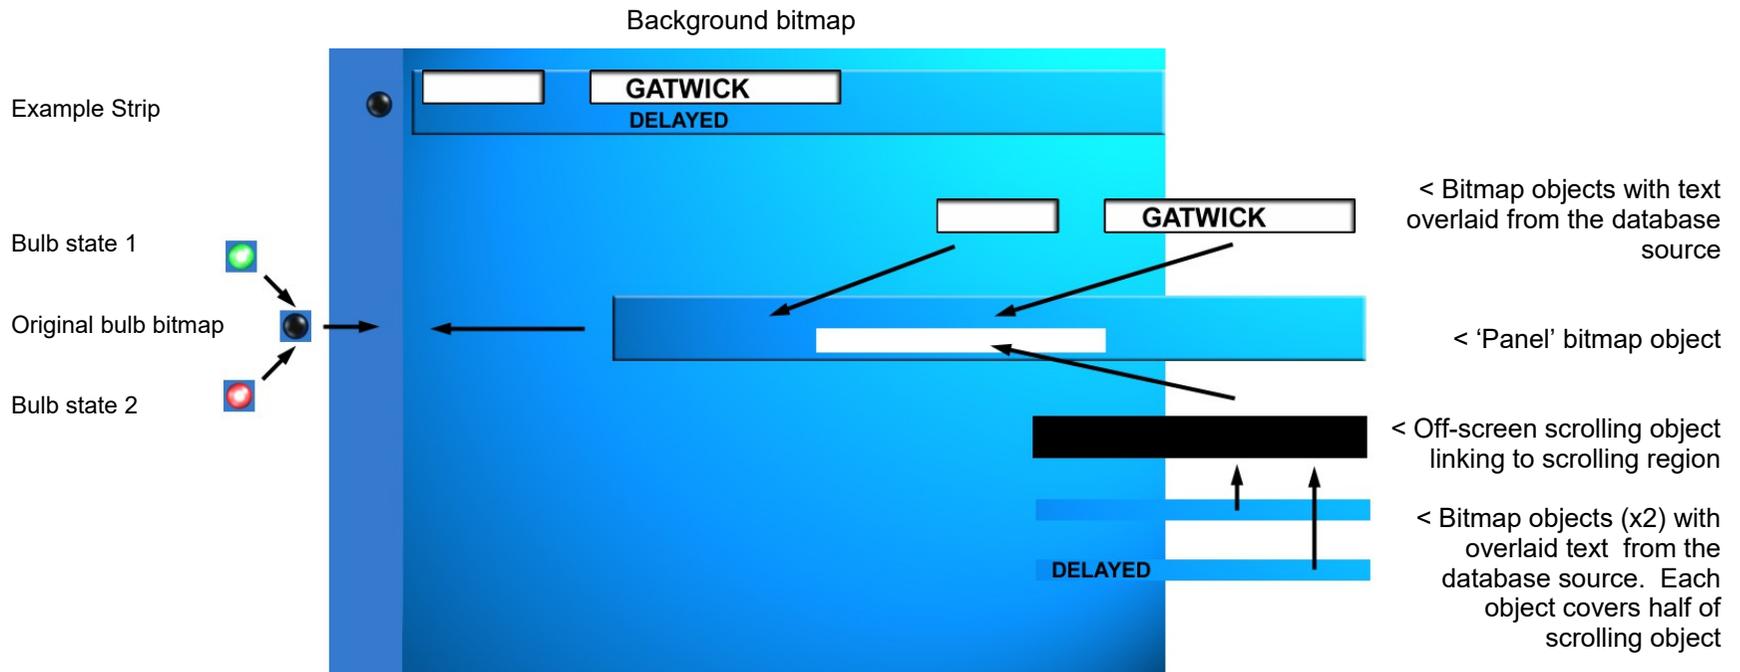


Fig. 25 – Construction of the ‘Ancona’ Display

As before, the most efficient way of constructing this page would involve creating one line of objects and duplicating them vertically. The only difference in this display is the fact that the scrolling region is placed on a bitmap background. When creating the text objects and scrolling object to be placed in the scrolling window, a bitmap image must be targetted to the scrolling object and placed behind the text. The bitmap will scroll with the text so it is imperative that the bitmap colors and detail matches the background (image on the object behind the scrolling region). This method of scrolling text and part of the background is far less CPU intensive than scrolling overlaid objects over a static background.

Multi-Purpose Translations

Midas Viewpoint can perform multiple translations from a single database input string. This allows for a multitude of changes within a display by changing just one variable in the database. The Ancona display uses this feature to provide information in multiple languages and objects with flexible bitmaps, i.e. the indicator 'lights' that has three states (red / green / off). For more information on translations, read steps 11 and 12 of Tutorial 3 and refer to Translations in the dialog box explanations.

For multiple translations of a single string, the string must be entered repeatedly into the 'Input String' text box in the Edit Translations box, with a suitable translation for each. For example, the input string 'Departed' would appear a number of times in the input string field, with their translation into each of the required languages in the corresponding translation field. Each of the same input string entries has an index number dependant on order within the text box. The first input entry would have the index no. of 0. The second 'Departed' down in the list would have the index of 1.

To associate an object with a certain translation, the relevant index number must be entered into the Translation Settings box in the Advanced Display Properties Dialog. The 'light bulb' states are also produced like this with a different bitmap for each translation. Note that the background color of the bulb bitmap (created in an image editing program) has the same values as the object behind to give the impression of one solid panel of light bulbs. Always make sure that all the bitmaps, and the translated object that contains them, are the same dimensions to avoid unnecessary distortions.

Stepped Animations

As explained earlier, onscreen animations can be controlled by manipulating a number of variables found in the Advanced Display Properties Dialog Box under the Animation / Scrolling Parameters section. This display uses these parameters for the scrolling regions, as they move text objects into view, pausing for a moment then continue to scroll. The animated text objects at the top of the page are sequenced using the technique detailed in Step 5 of Tutorial 3. Stepping refers to stop / starting animation, causing the sequence to pause for a determined period. The Step Lines text box controls the amount of pixel lines travelled before the break, while Step Period refers to the pause duration.

Tutorial 5: Presentation playback Overview

Facilities

Midas Viewpoint clients can play PowerPoint and OpenOffice Presentations.

To make a form display a presentation, open the Display Properties dialog, and then click the Presentation tab in the Display Properties dialog. Here you will be able to select the presentation .ppt file, and set operational parameters to ensure that the presentation runs automatically.

Tutorial 6: Remote Control Overview

Remote Control Facilities

Midas Viewpoint (MVP) clients can be controlled and monitored from the Control Centre dialog box of any remote Midas application. All that is required for remote control is a TCP/IP link over any medium, from LAN to WAN, telephone modem, Internet, or satellite.

To configure remote control, you must enter Multicast settings into the Operational Settings dialog for both the MVP server and client. The multicast address is used to specify a common communications channel between the server and clients. The Tx and Rx port settings define the communications port, and must be reversed in relation to the server and clients. i.e. the server may transmit on port 3020 and receive on 3021, whereas the client must have a receive port that listens to the transmit port of the server, i.e. 3020. For specific address settings you should refer to your organisations IT manager, or contact your local support centre.

Midas uses a dat file named 'tree.dat' that defines the MVP network structure, referring to the network name of client machines and their Node ID (configurable in the Operational Properties dialog of the client machine). This file can be customized by clicking 'change' in the Control Centre' and right-clicking 'tree.dat' to open the file in a simple text-editing application, such as notepad. The system network tree can be divided into sections that target specific clients, allowing group/individual specific control.

Example network definition file:

```
.[All Groups – Broadcast #G0].1  
.[Departures Group #G1 >\\Public-A1\Midas\c].1  
.[Departures T1 #N434 >\\Public-A1\Midas\c].2  
.[Departures T1 #N435 >\\Public-A2\Midas\c].2  
.[Retail Group #G2 >\\Retail-B1].1
```

The above shows entries that are used to define a simple information display system as would be used, in this example, at an airport with retail complex.

The structure of the network definition file is quite simple. Each line begins with .[and is followed by the name of the entry. Following that the group or node assignment is specified, for example #G0. In the above example the first entry defines broadcast group which, when selected allows all MVP clients to be addressed. The inclusion of a group broadcast entry is optional.

Group 1 (titled 'Departures Group' in the system tree display in the Control Centre) refers to the 'Midas' folder in the 'c' drive of 'Public-A1' client. The form list is loaded from the selected client machine and appears in the 'Display Form/File' drop down box in the Control Centre, after selecting the 'File Access' check box. The forms will be displayed on the systems within this group (signified by the '.2' after the string). The third text string defines the client machine (which is also Public-A1) and its node ID. Enter the node for each system (3 digit number) in the Node ID text box in the Operational Properties dialog box. The fourth string is another machine (with separate node) which is part of the same group, referring to Public-A1 for the display form list.

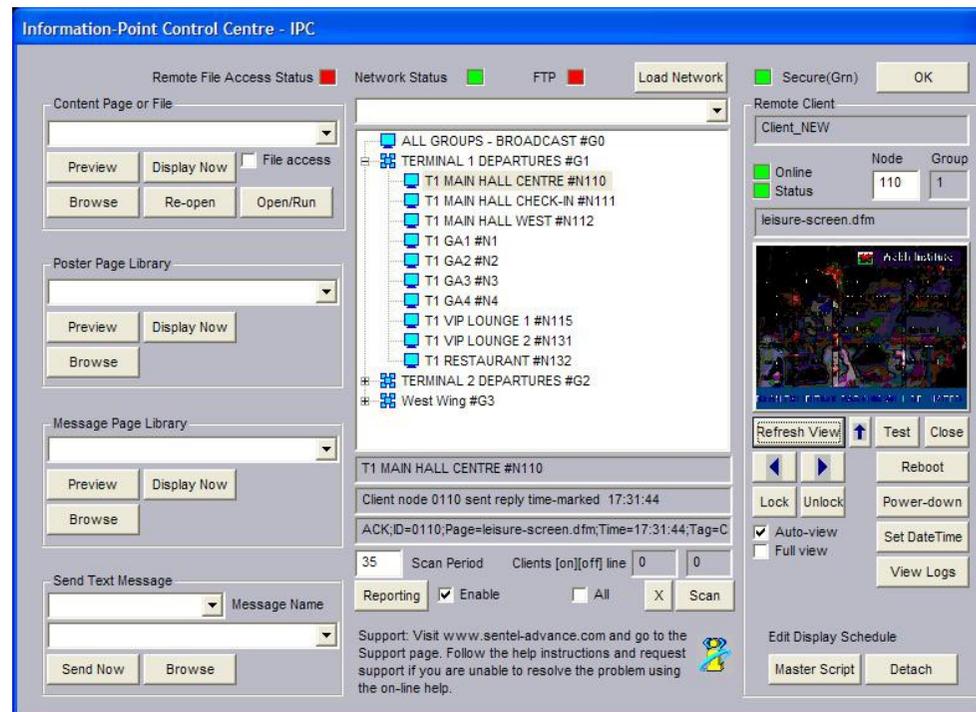


Fig. 26 – System Network

Fig. 26, the Information Point Control Centre dialog, shows the system network tree with a list of clients connected to the network ('Terminal 1 Departures' is the group name). After clicking on the client machine's icon in the tree view, MVP will attempt to access that machine's local display form library. On the right of this dialog box, the indicators show that the client machine is online, operational and the node and currently displayed form are shown (right click on the client name in the system network tree to get a more comprehensive report). The 'Auto-view' check box allows the host system to obtain a feedback of the display from a specific machine as it updates.

It is possible to reboot, shut down or broadcast the date and time (sourced from the server machine) across a networked group by selecting that group and clicking on the relevant button to the bottom right of this dialog box.

After clicking the File Access check-box, it is possible to select a display form to be shown across a group of client PCs or a selected individual. Simply browse to the desired display form, after selecting a group or individual client, and click the 'Display Now' button. As long as the form you have selected is present at the same location on every machine, then the group or client will display that form, be it a single page or a page containing a script, taking the display into a new loop. The same principle applies to the 'Poster' and 'Message' display broadcasts.

The Remote Control Centre Display Form

The sample 'Control Centre.dfm' is a form with button and view objects to control and monitor networked MVP clients. The simple button-click interface uses objects and text commands for MVP client management. The Control Centre incorporates the following controls and commands.

Remote Display Tracking

This feature allows viewing of the current on-screen content of a remote system as it changes. The 'viewer' object captures the client screen image from an off-screen object. The 'Update View' object contains a command (see 'commands' section) that takes a 'snapshot' of the display of the client machine and transfers the bitmap to the off-screen object. The command "cmd_crs node=434 object=7" is telling the system to capture the remote screen of the system with 434 ID and assign object 7 with the information.

The Next and Previous command buttons send a command to the client machine to move to the next/previous page in the carousel.

Send Text Message

The 'cmd_stx' command allows text to be transferred to a targeted object on the client machine. Both the source object (which can reside on screen for changeable text) and target object (specific data link name) must be specified. To clear the target object, send textual information from a blank object.

Previewing Displays

When dfm files are saved, a snapshot of the screen is saved as a bitmap (in effect, saving updates/creates two files). These bitmaps can be used to preview the content of a display in the control centre when an object is linked to the appropriate image (the dfm file name+.bmp) housed on the machine with the display content (#G1).

Private Packet Protocol

Guide through the ePC's serial communication protocol

Introduction

This section describes the ePC-ViewPoint computer's asynchronous serial communications packet protocol.

The system is equipped with this protocol to enable deployment in remote locations where only serial communication is available.

This protocol supports error-resistant serial communications, offering a sufficient range of facilities to meet the needs of a variety of mission-critical information display applications.

Note: The ePC units can be interfaced to MPC power control units, which are used to control the 110/220 VAC mains supply to other devices, such as display monitors, motors, valve controls, etc. Where monitor operation is periodic, this unit can extend the operational life of the monitors and reduce electrical power requirements considerably.

Data transfer

The principle objective in the specification of this protocol is to implement a simple and flexible method for controlling the display of textual data on the display form, such that the data can be positioned wherever required, providing fixed or scrolling tables for schedules, etc. To achieve this, the ePC's utilise a local database containing up to 100 records, stored within a table. The table holds a snap-shot of current records, i.e. train or aircraft movements, which have been transmitted to the ePC using this protocol from the main computer.

The images produced by the ePC's are generated from display form files (.dfm), which utilise display objects to produce the required display layout. Each object contains display parameters, and either static data (header text, bitmap file, etc.) or a link reference (*Column Y* below) to a field within the database table. When the remote computer updates the data within the table, the display objects reflect the changes.

The table below details the structure of a *single record*. Column X below shows the notional reference name of the field. Column Y shows the fields' references. Column Z shows the size range of each field.

<i>Column X</i>	<i>Column Y</i>	<i>Column Z</i>
FIELD NAME (NOTIONAL)	FIELD REFERENCE COLUMN	SIZE
RECORD TAG	1,000 – 1,999	8 chars
DATE	2,000 – 2,999	6 chars
SCHEDULED TIME	3,000 – 3,999	6 chars
ACTUAL TIME	4,000 – 4,999	6 chars
ORIGIN	5,000 – 5,999	Up to 128 chars
DESTINATION	6,000 – 6,999	Up to 128 chars
STATUS	7,000 – 7,999	8 chars
PUBLIC REMARK	8,000 – 8,999	Up to 128 chars
STAFF REMARK	9,000 – 9,999	Up to 128 chars
GATE	10,000 – 10,999	8 chars
Field 11	11,000 to 11,999	Up to 128 chars
...
Field30	30,000 to 30,999	Up to 128 chars

Column X above is stored as a single row in the ePC local data table.

Structure of ePC record table

An ePC stores up to 100 records in a table of 100 rows. Each row holds a single train or aircraft record.

1st record == first row // See table below

The first column (*Col. A* below) of the first row (1st record) has a reference of 1,000 (Record Tag; flight or train code).

The second column of the first row has a reference of 3,000 (Scheduled time).

2nd record == second row

The second row's first column has a reference of 1,001 (next Record Tag).

The second row's second column has a reference of 3,001 (next Date).

And so on...

	<i>Col. A</i>	<i>Col. B</i>	<i>Col. C</i>	<i>Col. D</i>	<i>Col. E</i>
Ref. No. >	1000	3000	6000	8000	10000
1st record	BA123	10:30	HEATHROW	ON SCHEDULE	7

Ref. No. >	1001	3001	6001	8001	10001
2nd record	KL201	10:45	AMSTERDAM	ON SCHEDULE	2

These references are used by this communications protocol to target records and fields within the records.

Data packets

Textual information is transferred to the ePCs in ASCII packets with appended 8-bit checksum (CS) in ASCII hex format. No control codes are used.

Packets are preceded with an ePC target ID, and a record reference, which relates to a record or a particular field within a record.

For example,

```
@1>1000"TR14";"17/06/97";"12:30";"12:42";"PADDINGTON";"HEATHROW"~CS<EOT>
```

updates the first record (fields 1000 – 5000 inclusive) of an ePC's local database table, whereas,

```
@1>3000"12:45"~CS<EOT>
```

updates the same record's time field (ref. 3000) only.

The @1 shown encodes the ID of the ePC addressed as unit no. 1.

Variable parameter lengths: The ePC determines the number of fields to be updated by counting the number of comma-separated elements sent.

Command packets

On power-up and reset, the ePC will load a display form file if designated in the command line parameters used. Thereafter, the transmission of data to the ePC will automatically control and update the display.

It may be useful to select other predefined display forms, for example, to display promotional or emergency messages. This is supported through a variety of commands.

A method to update message lines is incorporated in the table update command discussed earlier. As less than 100 record rows will usually be displayed, a message line can be designated to an unused record reference.

Each ePC can display the time and date using an internal real-time clock (RTC), however, a command to reset the clock is periodically issued to compensate for small time-keeping inaccuracies that are inherent in all RTCs.

The following ASCII commands are provided:

Load display file

```
@1*100"file.dfm"~CS<EOT>
```

Where the '1' following the '@' is the ID of the target ePC unit (1-n), or 0 for a general broadcast. The *100 is the command code, and the text within quotes the filename. The tilde ~ precedes the CS as a two character hex sequence.

Set time

```
@1*102"10:30.00"~CS<EOT>
```

Time encoded within quotes is 10:30 ; 24 hour clock only.

Set date

```
@1*103"17/6/1997"~CS<EOT>
```

Date encoded in UK format within quotes is 17th June 1997.

Note: Year 2000 compliance: Year settings of 96 and above refer to 20th century. Settings below 96 refer to 21st century.

Set default display

```
@1*104"c:\midas\OutOfService#1.dfm",3600"~CS<EOT>
```

This command sets the default display for the ePC. The filename is followed by the timeout in seconds. If this is set, the ePC will switch to the default page after not receiving a valid message for the timeout set.

Set last display

```
@1*124"c:\midas\heathrow express 800x600.dfm"~CS<EOT>
```

This command sets the file name of the last form displayed by the ePC. This command is useful to make the ePC return to a different page after the next timeout condition is resolved rather than the current displayed form.

Foreground Colour Change

Four character bytes can be added to the start of the text string data within commands. The first character is the ASCII Escape code, 0x1b, followed by three 8-bit character codes which hold the r, g, b values:

ESC r g b r g b values 1 – 255 : encoded as three 8-bit binary character values

Checksum

For testing purposes only, the checksum may be set to XX ascii to avoid the need to calculate checksum values. This is useful for testing command processing using an attached terminal, but should never be used in a final application release.

Blank display - also drives optional monitor power control module

```
@1*105~CS<EOT>                    CS = 4a
```

The display of the ePC is blanked (to black). This prevents monitor burn-out when the monitors are not required.

Unblank display - also drives optional monitor power control module

@1*106~CS<EOT> CS = 49

Start wipe - starts a wipe update sequence

@1*107~CS<EOT>

Auto-wipe - recommences auto-wiping sequence

@1*108~CS<EOT>

Download file- requests ePC to down-load file to ePC's hard disk

```
@1*112"c:\midas\arrivals.dfm";"18368"~CS<EOT>#P1"256"<packet1>~CS...#P72"192"<packet72>~CS
```

This command requests the ePC to receive a file and store it on its local drive. The first parameter is the filename with path, i.e. "c:\midas\arrivals.dfm", the second parameter is the length of the disk file in bytes, followed by the check-sum of the command. The file data follows as 256 byte (or less) packets. Packet start code is the '#' symbol, followed by the packet ID, 'Pn', where the 'n' of 'Pn' is the ASCII number of the packet, followed by the packets length, say, "256", and the raw binary file data; note: data is not encapsulated in brackets <>. The three dots '...' before the '#P72' in the example command above only indicate that there exists further data packets, namely P2 – P71, which have not been shown to save paper!

To improve checksum reliability, data packet size has been reduced to 256 bytes or less, each with its own CS appended.

The ePC will respond to each data packet with an ACK or NAK sequence. The host must resend the packet if a NAK is received.

Note: To cancel the command, send #PX as the next packet start code.

Upload file - requests ePC to transmit specified file to host

```
@1*113"c:\midas\midas.log"~CS<EOT>
```

The above command requests the ePC to transmit a file from its local drive to the host computer. This can be useful for extracting run-time log files generated by the ePC. Other files may also be up-loaded. Send ESC EOT (0x1b, 0x04) to the ePC to cancel uploading.

The ePC response package format is as below:

```
#1*113"c:\midas\midas.log";"378"~CS<EOT>#P1"256"<packet1>~CS#P2"122"<packet2>~CS
```

Apart from the leading '#' (replacing the '@'), the format is identical to the Download file command.

To improve checksum reliability, data packet size has been set at 256 bytes or less, each with its own CS appended.

To be implemented: The host must respond to each data packet sent by the ePC with an ACK or NAK sequence. The ePC will resend the packet if a NAK is received.

Reset ePC

@1*999"RESET"~CS<EOT>

The ePC performs a system reset. This is used in the unlikely event that the unit malfunctions and the internal watchdog reset fails. It also enables a full system re-test and hard disk data repair procedure to be executed.

Status Report

@1*8~CS<EOT>

Requests an ACK status response from the ePC if it is fully functional.

The ack sequence will be followed by the name of the currently displayed file:

After the first Status request issued since the display was loaded:-

|FIRST DFM LOAD = c:\midas\heathrow express 800x600.dfm|

Thereafter:-

|DFM LOAD = c:\midas\heathrow express 800x600.dfm|

or

|DFM LOAD = NULL |

The filename packet is encapsulated between two pipe "|" characters.

If a non-fatal failure is detected, a NAK response will be issued with a fault code encoded in NAK's <n> parameter as below.

000 = Unknown error

01X = 0 Unrecoverable error

X = 1 System board failure

X = 2 System (RAM) memory module failure

X = 3 Hard disk failure

X = 4 Out of hard disk memory

X = 5 Video card failure

X = 6 Sound card failure

X = 7 Network card failure

The above codes are also stored in log file on the hard disk for maintenance support.

ePC Acknowledge Packets

\$ACK<ID>;<n>~CS<EOT> - Command/Data accepted

\$NAK<ID>;<n>~CS<EOT> - Command/Data error occurred.

Where <ID> is the ePC ID number, and <n> is the command code accepted.

I.e. Good response from ePC ID = 4 after receipt of set date command:

\$ACK4;103~CS<EOT> Where CS is the checksum in hex, I.e. **3F**.

Note: If the ePC is unable to determine the field encoding of a corrupted packet, it will issue a NAK which has the field number set to zero.

Detailed description of packets

Checksum – 8-bit ► Checksum Start Position changed

The checksum is transmitted as two hexadecimal characters, i.e. C8.

The checksum is calculated by reading the first character to be transmitted after the packet type indicator, the '*' or '>' character, and exclusive-oring it with each successive character up to and including the tilde ~. The final character, <EOT> , is not included in calculations.

Note: The ePC can accept a checksum in any case, i.e. 3f or 3F.

White Spaces

Only the text within quotes may have white spaces. No space characters between parameters is permitted.

RS485 Interface

The preferred interface configuration is 4-wire, TX and RX. This avoids the real-time switching constraints required for 2-wire switched RS485.

RS485 2-wire interface TX/RX Timing

The ePC units will enable and then disable their TX drivers from 0 to 100 ms before and after transmitting a data packet. This setting can be configured in the Operational Settings dialog.

Note: ePC units will not respond to broadcast packets (packets issued with an address of zero) to prevent line contention.

Connection Ports

The RS232 serial, parallel LPT, keyboard and PS2 mouse ports, adhere to the standard PC-AT/PS2 model.

RS232 INTERFACE TO COM PORTS 1 & 2

ePC CABLE CONNECTOR (as IBM-PC) EIA 25-PIN FEMALE EIA 9-PIN FEMALE

FRAME GROUND		NC
SIGNAL GROUND		5
DATA SET READY (IN)	4	
DATA TERMINAL READY (OUT)		8 & 6
RECEIVE DATA (IN)		3
TRANSMIT DATA (OUT)		2

Pins 8 & 6 can be joined together and linked to DSR. Pins 8, 6, and 4 can be linked together to disable hardware handshaking.

<u>ePC</u>	<u>PC</u>	
5	5	Signal Ground
4	8-6	Handshakes (connect h/shake input pins 8 to 6)
8-6	4	
2	3	Tx
3	2	Rx

Note: If handshaking signals or XON/XOFF codes are not used, intermittent character loss may occur. To avoid this, you may need to insert inter-character delays on data transmission to the ePC, although this is unlikely. The length of delay is directly related to the baud rate used and function requested. Please call for further information if required.

RS485 Communications Port

The equipment's RS485 port is software transparent, connecting via a standard high-speed asynchronous port. Male D-type chassis connector pin-out. (Note: TX driver enabled during message transmission only.)

1	TX+ out	4	DSR+ in
6	TX- out	9	DSR- in
2	RX+ in		
7	RX- in		
3	DTR+ out		
8	DTR- out		

Sentel Technical support

Email: info@sentel-advance.com

Web site: <http://www.sentel-advance.com>

Please visit our website for operating manual updates.

Index

Animation.....	28, 83, 85
Background (object 0).....	11, 69
Buttons.....	25
Carousel Script.....	81
Changing the attributes for multiple objects.....	20
Connection Ports.....	96
Control Centre Display Form.....	88
Data packets.....	91
Database.....	52, 53, 54, 56, 57, 72, 73, 74, 76, 79
Database.....	
Creation Guide.....	54
Properties.....	54
Date & Time.....	21

Demonstration Download..... 11

Display Device Settings..... 62

Display Object Advanced Settings..... 23, 43

Display Object Editor..... 43

Display Object moving and stretching..... 20

Edit Toolbar..... 17

Initial Screen..... 11

Logo-Linking..... 59, 76

Main Toolbar..... 15

Master Script..... 27, 49, 81

Mouse Functions..... 18

Objects.....

Description.....19

Editing..... 11

Operating Conditions.....

EMC.....8

Environment.....8

Safety.....8

overlay..... 40

Overlay..... 20, 22, 27, 33, 71, 84

Private Packet Protocol..... 96

Remote..... 88

System Network..... 87

System Requirements..... 8

Text Toolbar..... 16

Time display formatting..... 21

Translation..... 59, 74, 85

Tutorial 5.....

PowerPoint playback Overview.....86